



ASSEMBLY INSTRUCTIONS

TOP VIEW

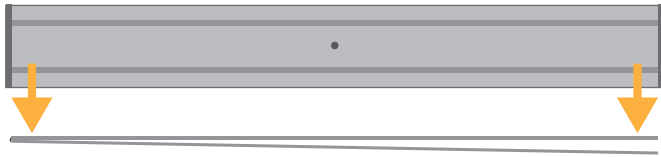


1. Extract the modular rod from the compartment located in the pedestal

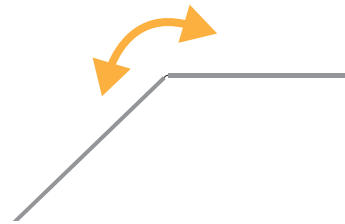


2. Assemble the support rod

TOP VIEW

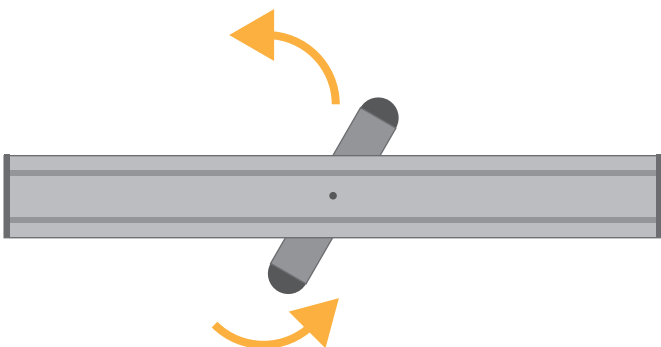

3. Rotate the foot at the bottom of the display stand to a perpendicular position with respect to the structure.

FRONT VIEW

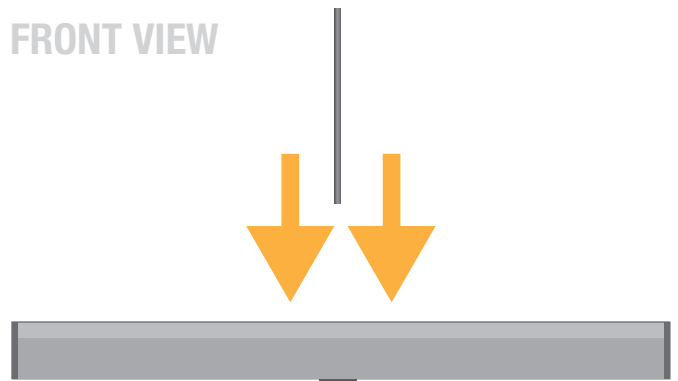

4. Insert the composite rod into the hole in the structure.
ATTENTION - make sure the rod is perpendicular to the ground

FRONT VIEW



5. Remove the locking key of the print winding mechanism and then remove the graphic from the structure by simply pulling.
Fix the rod to the upper profile.
(Repeat the operation for both prints)


ATTENTION - the pin on the base of the display, when inserted, blocks rewinding. Remove it only after applying the sheet. If replacing the print, it must be reinserted before carrying out the change.



youtube.com/StudioStandsSrl
for the assembly video tutorial

INDOOR displays / **Double-sided FLASH**

STUDIOSTANDS.it
soluzioni espositive & stampa digitale

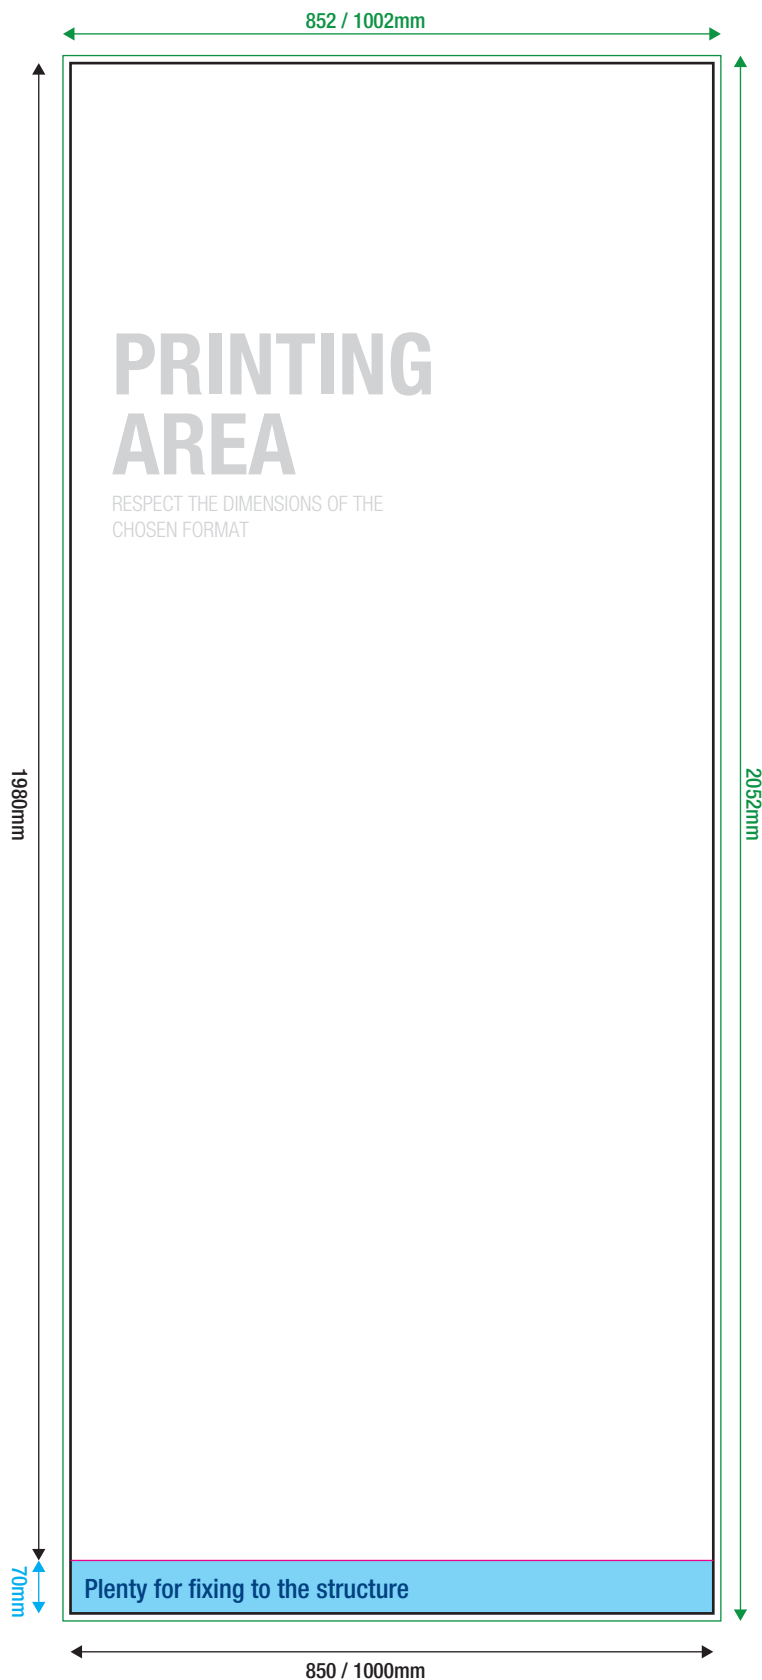

INDICATIVE TRACK

- **ABUNDANCE**
- **CUT**
- **SAFETY MARGIN**
(Do not place important content beyond this margin))

INFO FILE

Formats: .eps .pdf .jpg .tiff
 Color profile: CMYK
 Images: 100dpi - 1000dpi (for 1:10 scale files)
 Fonts: converted into paths
 Die path: only cutting path (where present)

INSTRUCTIONS FOR ASSEMBLY / REPLACEMENT OF THE PRINT

Operation performed by our operators for orders with Structure + Print solution



1. ATTENTION THE MECHANISM LOCKING KEY MUST BE INSERTED INTO THE STRUCTURE TO CARRY OUT THIS OPERATION.

Apply the lower part of the print to the plastic tab that protrudes from the structure - **for further fixing we recommend the application of staples in addition to simple double-sided tape**



2. Insert the upper edge into the click-clack profile.



3. Remove the locking key of the print winding mechanism then rewind the graphic inside the structure.