


ASSEMBLY INSTRUCTIONS

BACK VIEW




1. Extract the modular rod from the rear compartment of the frame

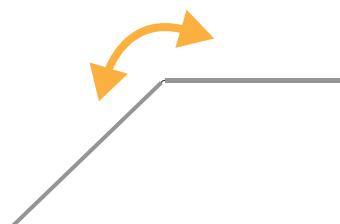

2. Assemble the support rod

FRONT VIEW

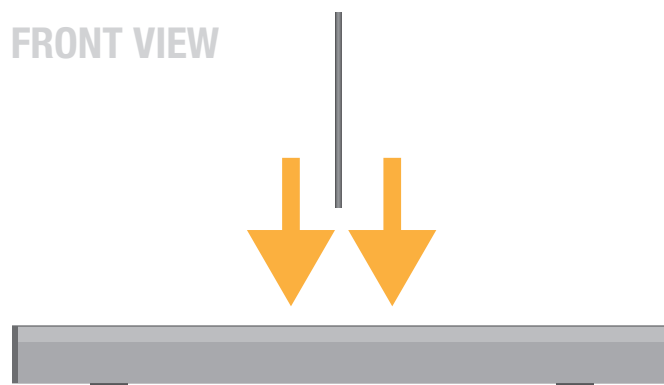

4. Insert the composite rod in the pedestal's hole.

WARNING - make sure that the rod is perpendicular to the ground

FRONT VIEW



5. Remove the locking key of the print winding mechanism, then extract the print simply by pulling it.
Attach the pole to the top profile


WARNING - the plug at the base of the display prevents the rewinding when inserted. Please take out the plug only after the banner has been attached. In case of print replacement the plug must be reinserted before changing the print.



NOTE: At the bottom of the Flash Deluxe pedestal there are height adjustable feet to ensure greater stability even on non-regular terrains.



youtube.com/StudioStandsSrl
for assembly video tutorial

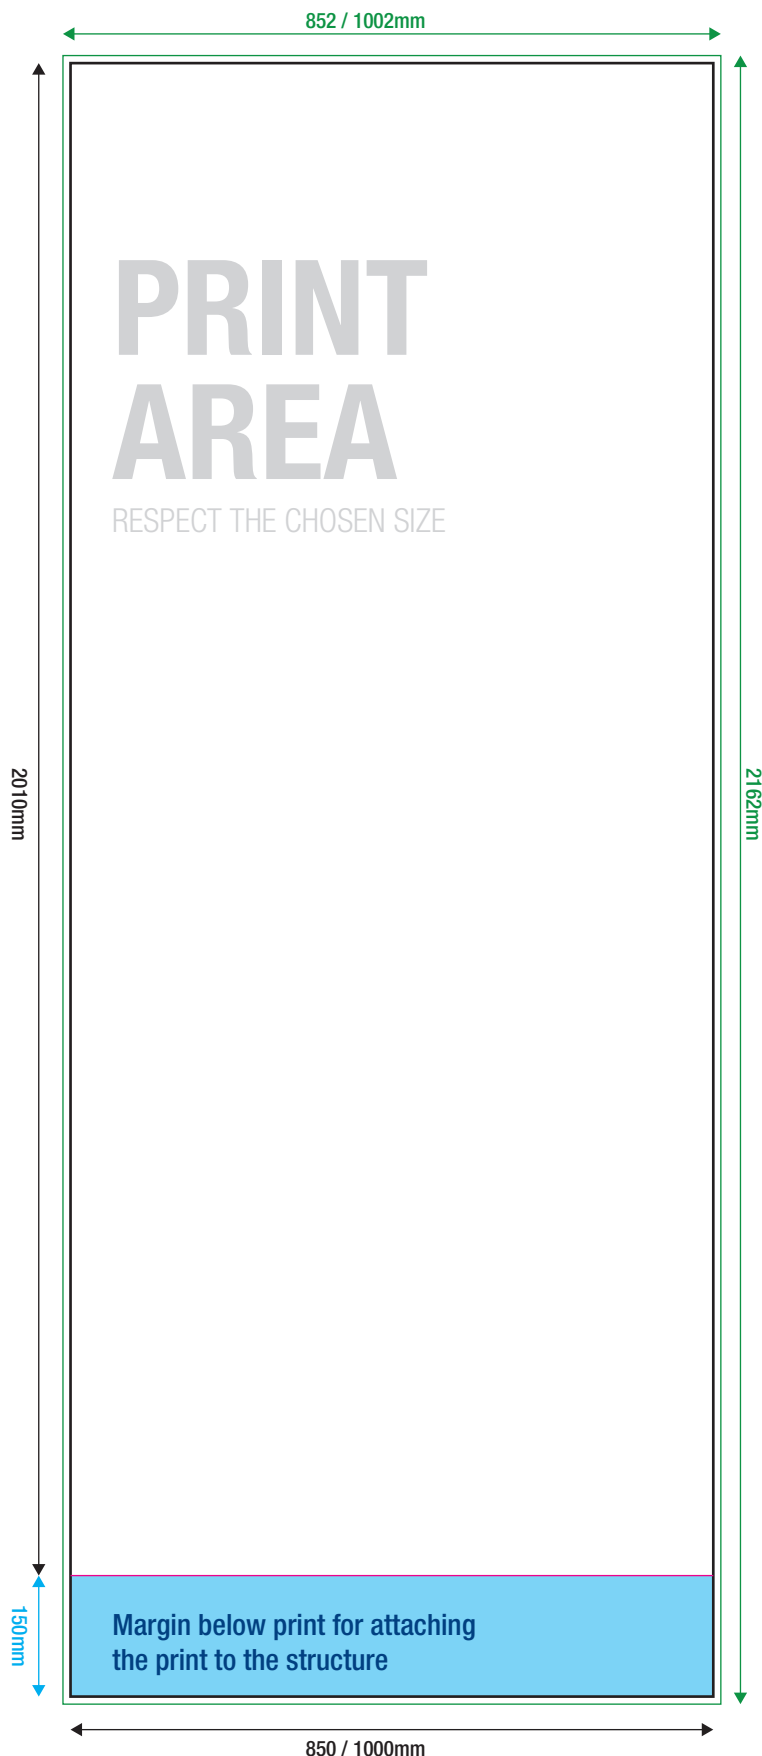

INDICATIVE LAYOUT

- BLEED
- CUT LINE
- SECURITY MARGIN
(Do not position important content outside this margin)

INFO FILE

File type: .eps .pdf .jpg .tiff
Color profile: CMYK
Images: 100dpi - 1000dpi (for 1:10 scale file)
Font: converted into vector paths
Layout lines: only cut line (where present)

INSTRUCTIONS FOR MOUNTING /REPLACING THE PRINT

Operation performed by our operators for orders with the “structure + print” solution



1. WARNING -THE KEY OF THE LOCKING MECHANISM HAS TO BE INSERTED IN THE STRUCTURE TO DO THIS OPERATION.

Apply the bottom of the print to the plastic tab that comes out of the structure - **for further fastening we recommend applying metal stitches in addition to double-sided tape.**



2. Insert the top edge of the print in the clic-clack profile.



3. Remove the locking key of the print winding mechanism and then rewind the print inside the frame.