ASSEMBLY INSTRUCTIONS

REAR VIEW



1. Extract the modular rod from the rear compartment of the structure



4. Insert the composite rod into the hole in the structure. ATTENTION - make sure the rod is perpendicular to the ground





2. Assemble the support rod

FRONT VIEW



5. Remove the locking key of the print winding mechanism and then remove the graphic from the structure by simply pulling. Fix the rod to the upper profile.

(The key is located under the removable chrome profiles)

ATTENTION - the pin on the base of the display, when inserted, blocks rewinding. Remove it only after applying the sheet. If replacing the print, it must be reinserted before carrying out the change.



youtube.com/StudioStandsSrl for the assembly video tutorial

NOTE: In the lower part of the Flash Deluxe base, there are height-adjustable feet to ensure greater stability even on uneven terrain.



INDOOR displays / **FLASH Deluxe**



INDOOR displays / FLASH Deluxe



INSTRUCTIONS FOR ASSEMBLY / REPLACEMENT OF THE PRINT

Operation performed by our operators for orders with Structure + Print solution





1. ATTENTION THE MECHANISM LOCKING KEY MUST BE INSERTED INTO THE STRUCTURE TO CARRY OUT THIS OPERATION.

Apply the lower part of the print to the plastic tab that protrudes from the structure - for further fixing we recommend the application of staples in addition to simple double-sided tape

2. Insert the upper edge into the click-clack profile.



3. Remove the locking key of the print winding mechanism then rewind the graphic inside the structure.



