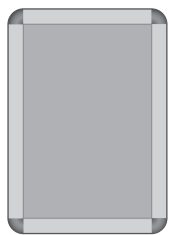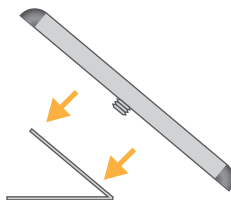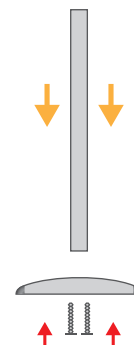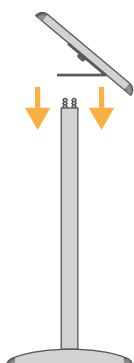# ASSEMBLY INSTRUCTIONS

FRONT   **BACK**

1. Remove the bolt from the back of the click-clack frame
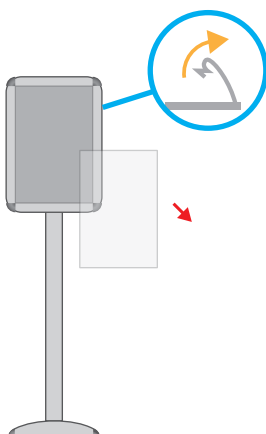
2. Apply the frame holder support to the screw pin on the back of the display then secure with the bolt removed previously

3. Insert the screws into the stand, join with the support rod then fix

4. Remove the bolts at the upper end of the support rod, apply the frame and then secure by repositioning the bolts

5. Open the snap profiles of the click-clack frame and remove the transparent PVC protective sheet present
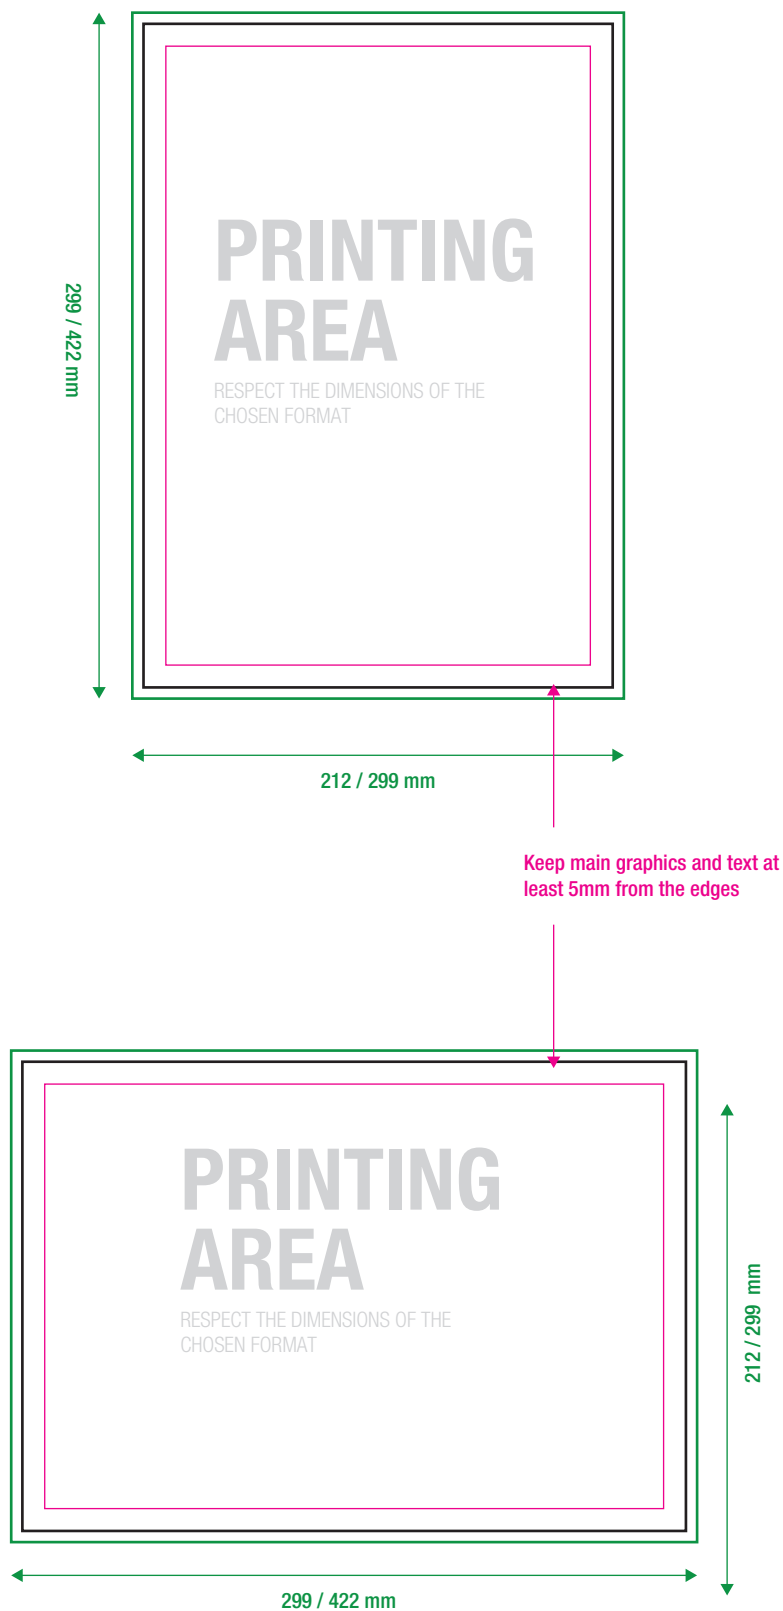
6. Insert the print, reposition the protective sheet then close the frame profiles

NOTE:

Infopoit is available in A4 and A3 format; the frame can be arranged both vertically and horizontally.

**youtube.com/StudioStandsSrl
for the assembly video tutorial**

INDOOR displays / INFOPOINT

STUDIOSTANDS.it®
soluzioni espositive & stampa digitale

PRINTING
AREA

RESPECT THE DIMENSIONS OF THE
CHOSEN FORMAT

299 / 422 mm

212 / 299 mm

Keep main graphics and text at least 5mm from the edges

PRINTING
AREA

RESPECT THE DIMENSIONS OF THE
CHOSEN FORMAT

212 / 299 mm

299 / 422 mm

ABUNDANCE

CUT

SAFETY MARGIN
(Do not place important content
beyond this margin))

INFO FILE

Formats: .eps .pdf .jpg .tiff

Color profile: CMYK

Images: 100dpi - 1000dpi (for 1:10 scale files)

Fonts: converted into paths

Die path: only cutting path (where present)

INDOOR displays / INFOPOINT

STUDIOSTANDS.it ®
soluzioni espositive & stampa digitale