
ASSEMBLY INSTRUCTIONS



1. Screw the pedestal to the display using the two screws supplied.

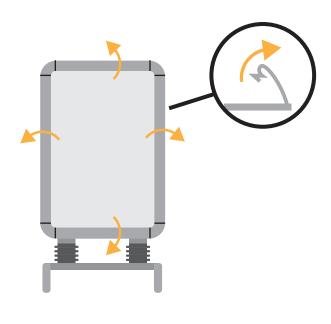

2. Pry the edges of the frame to open it.




3. Remove the protective transparent PVC




4. Position the print




5. Reposition the protective PVC and close the

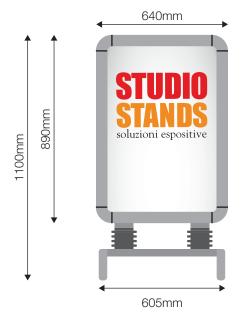



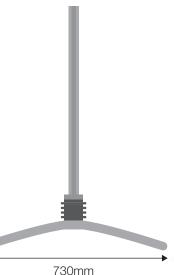

youtube.com/StudioStandsSrl for the assembly video tutorial

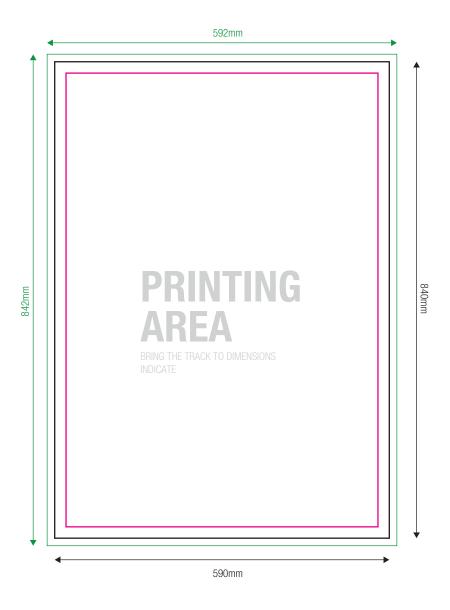

NOTE: We recommend placing important parts of the graphics and texts at least 10mm from the edge.

- ABUNDANCE
- CUT
- SAFETY MARGIN
(Do not place important content

beyond this margin))

INFO FILE

Formats: .eps .pdf .jpg .tiff Color profile: CMYK

Images: 100dpi - 1000dpi (for 1:10 scale files)

Fonts: converted into paths

Die path: only cutting path (where present)

