


ASSEMBLY INSTRUCTIONS



1. Assemble the support rod by joining the interlocking rods together; then insert into the hole on the base of the roll-up

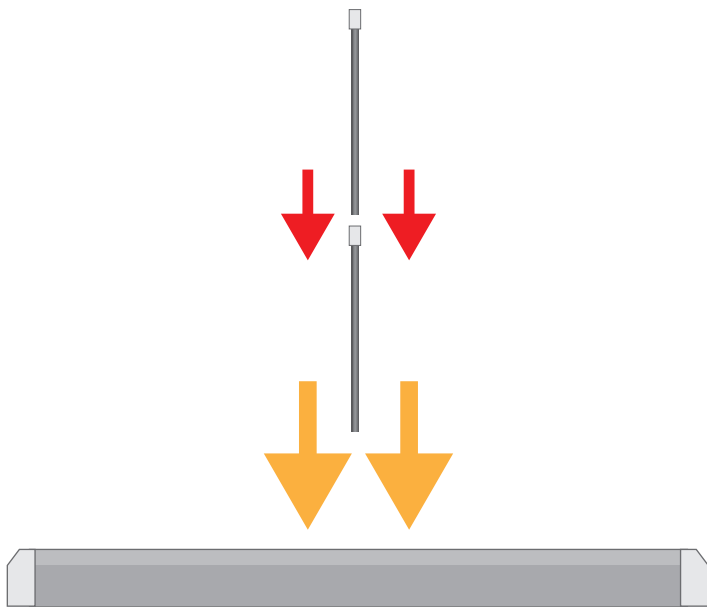

2. After extracting the pin/latch that blocks the mechanism; remove the print by simply pulling the upper support and then fix it to the upper hook of the composite rod



AVAILABLE IN SIZES

A4 - portrait

A4 - horizontal


A3 - vertical

NOTE:

once the product is assembled
we recommend reinserting the pin/latch
locking



youtube.com/StudioStandSrl
for the assembly video tutorial

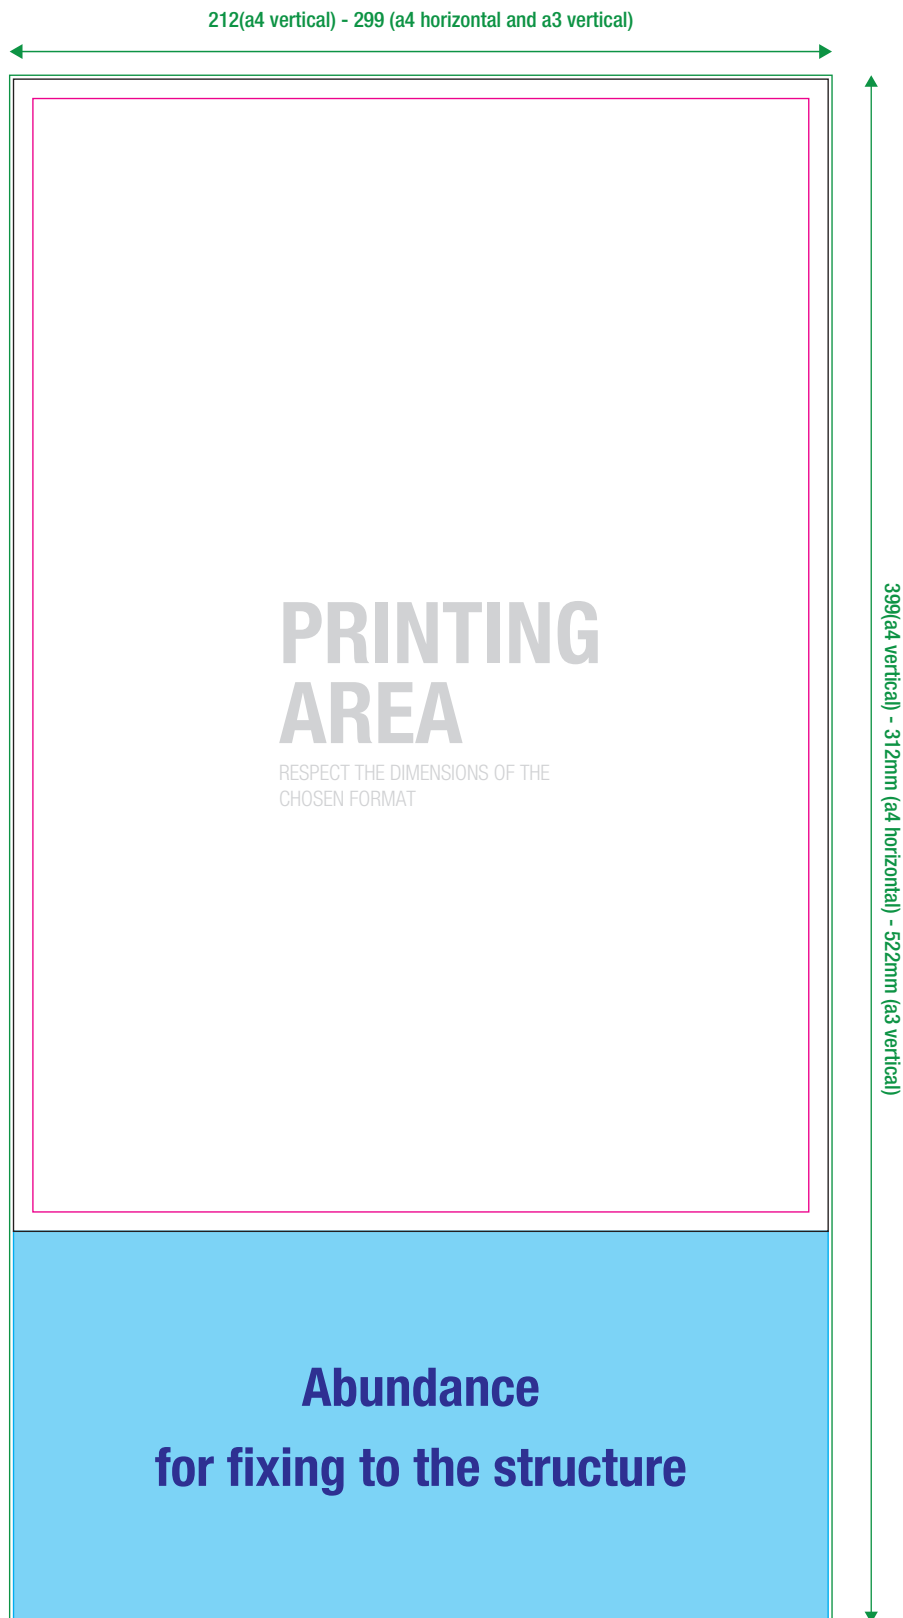

- **ABUNDANCE**
- **CUT**
- **SAFETY MARGIN**
(Do not place important content beyond this margin))

INFO FILE

Formats: .eps .pdf .jpg .tiff
Color profile: CMYK
Images: 100dpi - 1000dpi (for 1:10 scale files)
Fonts: converted into paths
Die path: only cutting path (where present)

INSTRUCTIONS FOR ASSEMBLY / REPLACEMENT OF THE PRINT

Operation performed by our operators for orders with Structure + Print solution



1. ATTENTION THE MECHANISM LOCKING KEY MUST BE INSERTED INTO THE STRUCTURE TO CARRY OUT THIS OPERATION.

Apply the lower part of the print to the plastic tab that protrudes from the structure - **for further fixing we recommend the application of staples in addition to simple double-sided tape**



2. Apply the top edge of the print to the top profile.



3. Remove the locking key of the print winding mechanism then rewind the graphic inside the structure.