

## **ASSEMBLY INSTRUCTIONS**

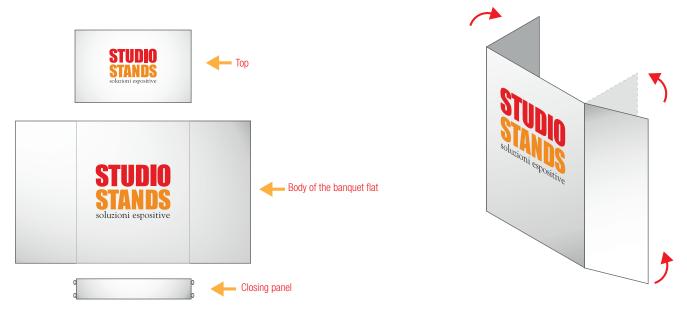

1. Arrange the die-cut panel in a "U" shape



2. Apply the interlocking top

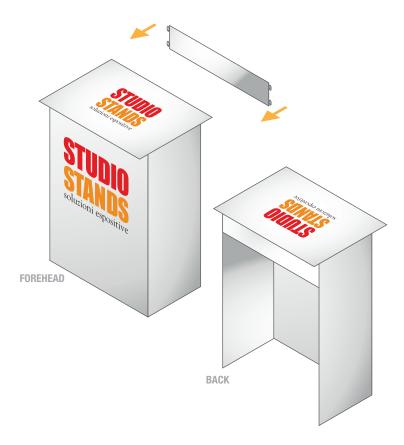


2. Position the support panel in the rear part, joining the two side rails

## **NOTE**


It is possible to accessorise the Desk with customized crowner, tablet holder and intermediate shelves.





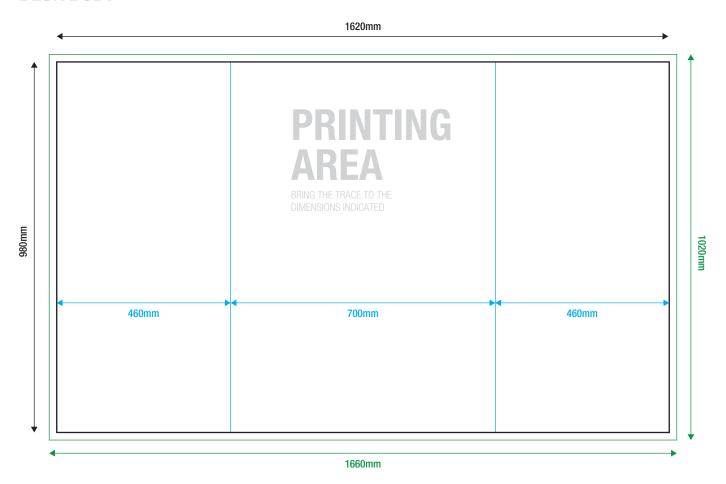

## **INDICATIVE TRACKS**

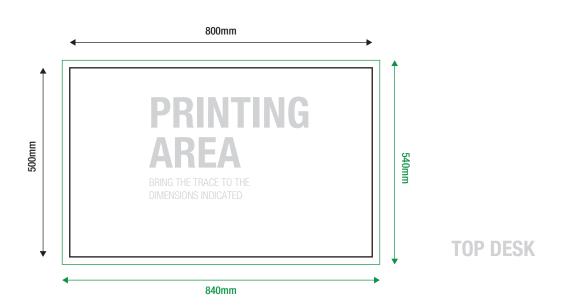

ABUNDANCE

CUT

SAFETY MARGIN
(Do not place important content beyond this margin))

**INFO FILE** 

Formats: .eps .pdf .jpg .tiff

Color profile: CMYK


Images: 100dpi - 1000dpi (for 1:10 scale files)

 $\textbf{Fonts:} \ \text{converted into paths} \\$ 


Die path: only cutting path (where present)





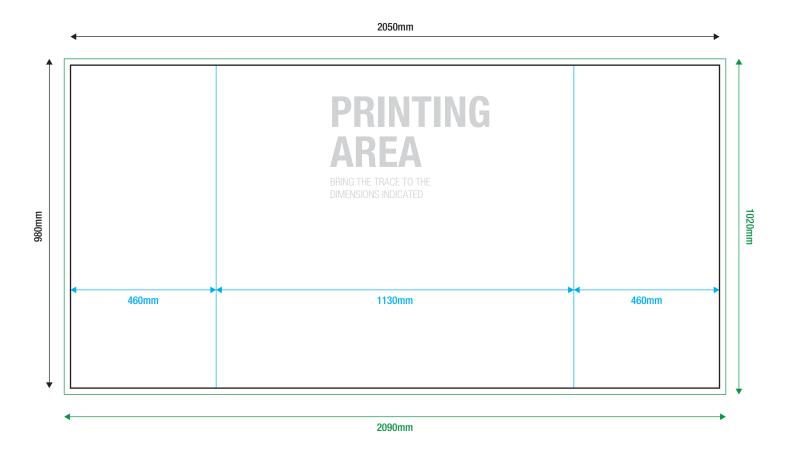

# **INDICATIVE TRACKS**

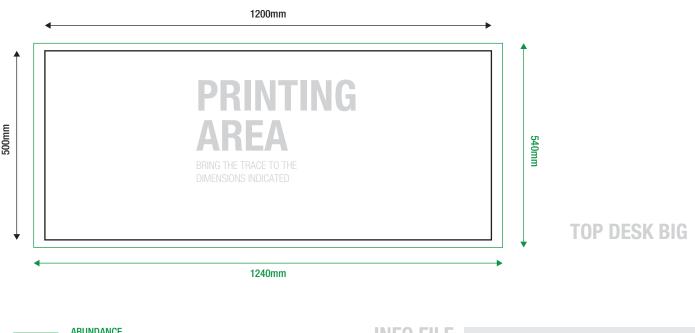

**ABUNDANCE** 

CUT

**SAFETY MARGIN** 

(Do not place important content beyond this margin))

**INFO FILE** 

Formats: .eps .pdf .jpg .tiff

Color profile: CMYK

Images: 100dpi - 1000dpi (for 1:10 scale files)


Fonts: converted into paths

Die path: only cutting path (where present)





## **ASSEMBLY INSTRUCTIONS**

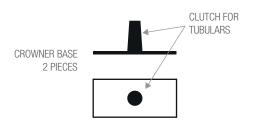







 ${\bf 1.}\ {\sf Fix}\ {\sf the}\ {\sf supports}\ {\sf to}\ {\sf the}\ {\sf desk}\ {\sf top}\ {\sf with}\ {\sf double-sided}\ {\sf tape}$ 



**2.** Apply the attachments for the tubes to the back of the Crowner with double-sided tape and the self-tapping screws supplied.

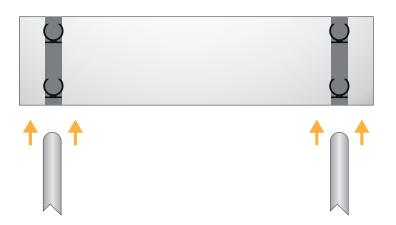


**3.** Hook the tubes to the appropriate attachments

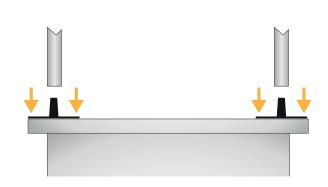

**4.** Insert the tubes into the previously applied couplings



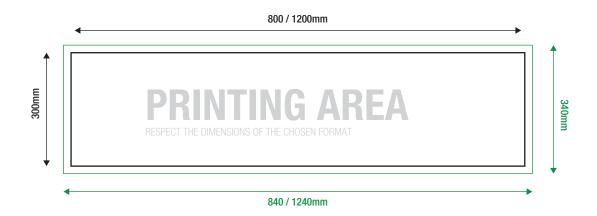

#### NOTE

800x300mm version for Desk 1200x300mm version for Desk Big



ABUNDANCE

CUT

SAFETY MARGIN

(Do not place important content beyond this margin))

**INFO FILE** 

Formats:. eps.pdf.jpg.tiff

Color profile: CMYK

Images: 100dpi - 1000dpi (for 1:10 scale files)

 $\textbf{Fonts:} \ \text{converted into paths} \\$ 

Die path: only cutting path (where present)

