


ASSEMBLY INSTRUCTIONS

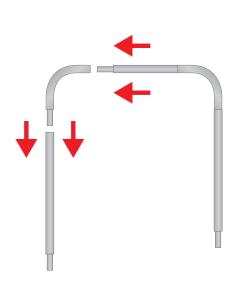


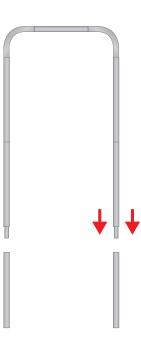

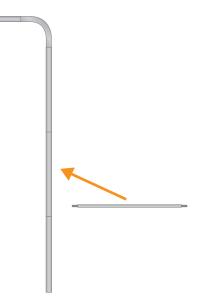

2.Screw the intermediate crosspiece to ensure greater consistency to the structure

 $\ensuremath{\mathbf{1}}$. Join the tubes together following the numbering of the stickers on them

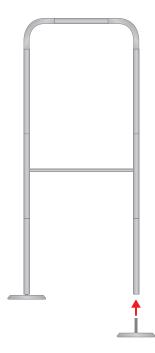

3. Apply the feet to the structure



4.Insert the print onto the frame and pull down until tension is complete





youtube.com/StudioStandsSrl for the assembly video tutorial



INDOOR displays / SOFT ECO TOTEM

INFO FILE

FORMATS: .eps .pdf .jpg .tiff

COLOR PROFILE: CMYK

IMAGES: included within the file at at least 100dpi resolution in 1:1 scale or 1000dpi for 1:10 scale works

FONTS: converted into paths

DIE PATTERN: Keep ONLY the outermost path - all other paths must be removed

CUT MARKS/REGISTER/COLOR BARS/FILE INFO: DO NOT insert inside the file


ABUNDANCE

CUT


SAFETY MARGIN (Do not place important content beyond this margin)



INDOOR displays / SOFT ECO TOTEM




TOTEN SOFT ECO 100 1:1 scale template

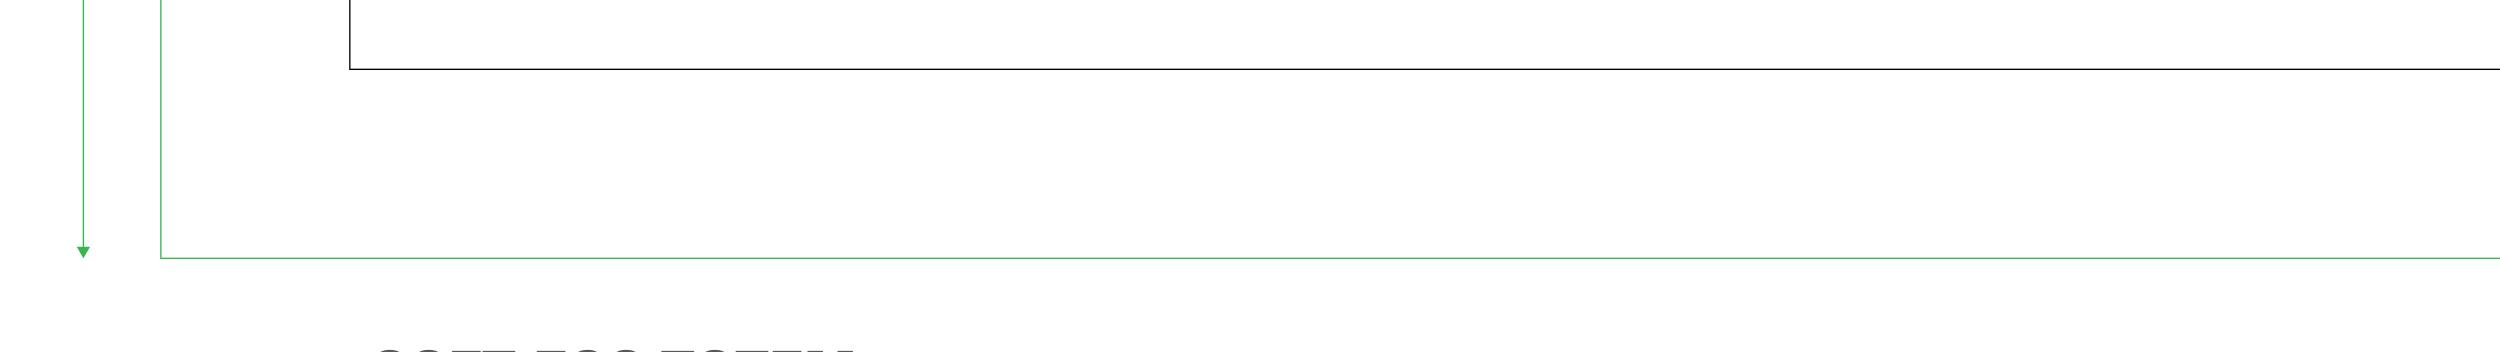





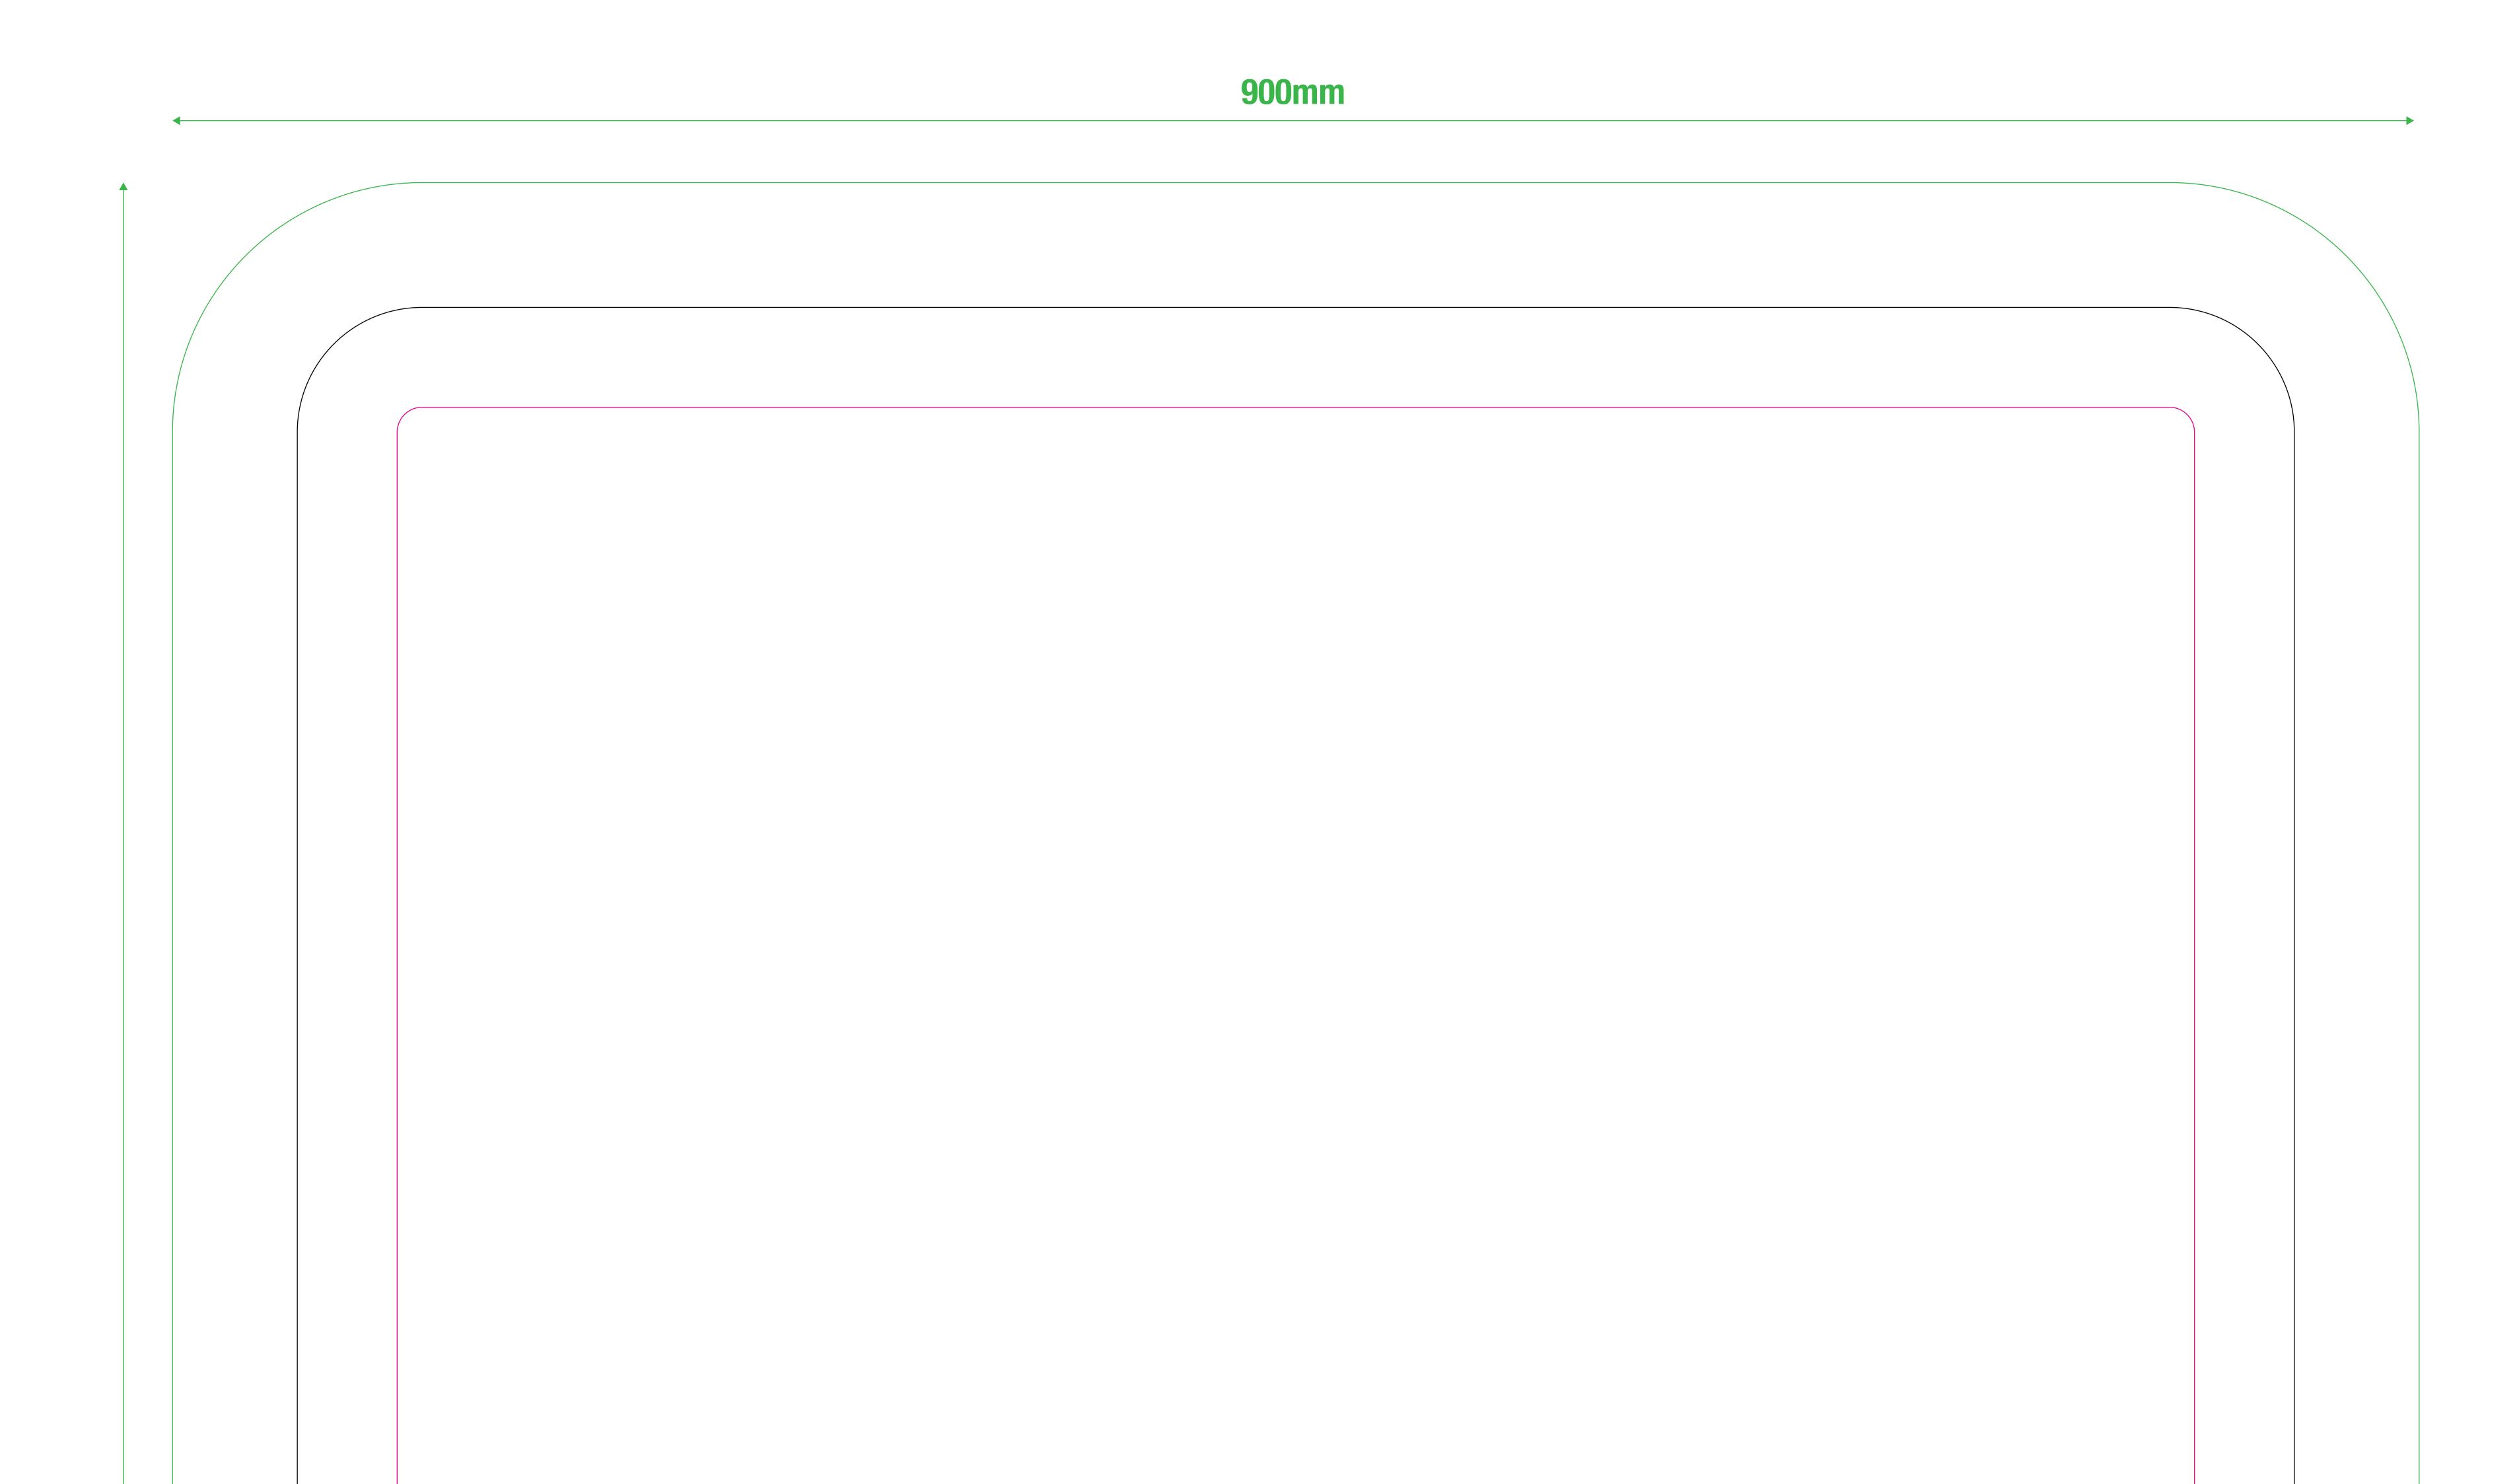

TOTEM SOFT ECO 80 1:1 scale template

2160mm



