

ASSEMBLY INSTRUCTIONS



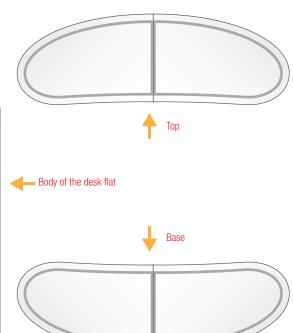

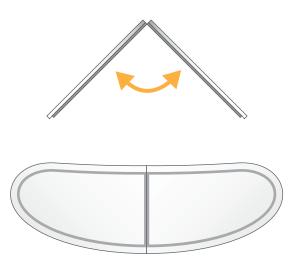

 ${\bf 1.}$ Open the wooden panel of the base leaving the Velcro profile facing upwards




 ${\bf 2.}$ Wrap the printed profile so that the Velcro bands coincide, then apply the top in the same way


NOTE

Desk Premium can be accessorised with a personalized crowner and tablet holder.





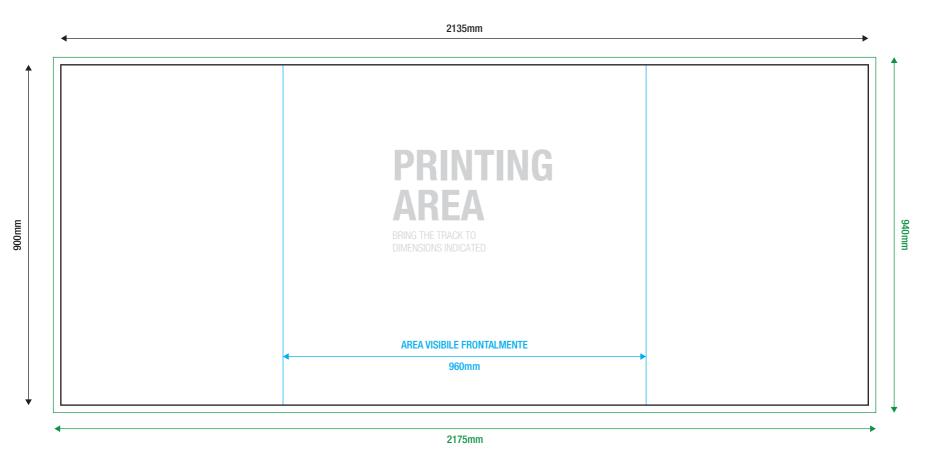

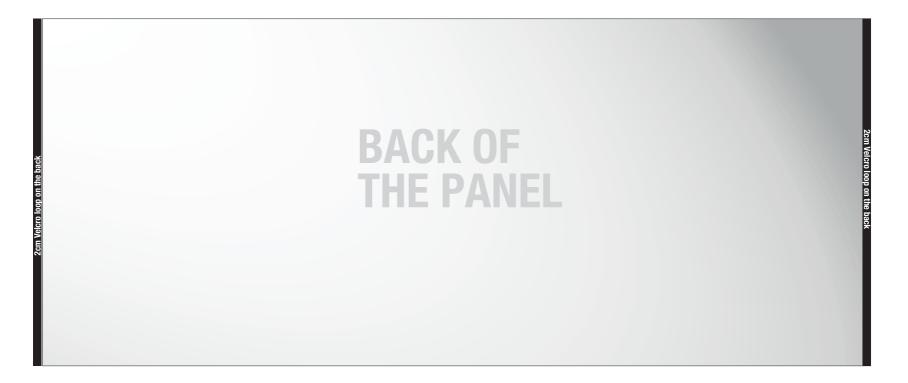

ABUNDANCE

CUT

SAFETY MARGIN
(Do not place important content beyond this margin))

INFO FILE

Formats: .eps .pdf .jpg .tiff

Color profile: CMYK


Images: 100dpi - 1000dpi (for 1:10 scale files)


Fonts: converted into paths

Die path: only cutting path (where present)



ASSEMBLY INSTRUCTIONS

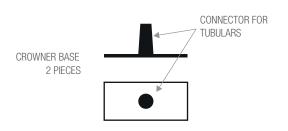

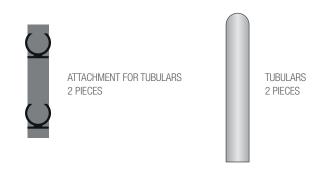





 ${\bf 1.}\ {\sf Fix}\ {\sf the}\ {\sf supports}\ {\sf to}\ {\sf the}\ {\sf desk}\ {\sf top}\ {\sf with}\ {\sf double-sided}\ {\sf tape}$



2. Apply the attachments for the tubes to the back of the Crowner with double-sided tape and the self-tapping screws supplied.

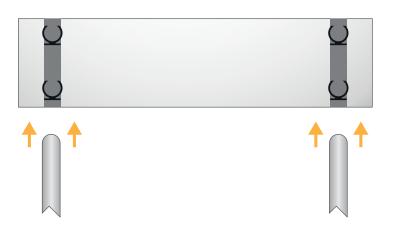


3. Hook the tubes to the appropriate attachments

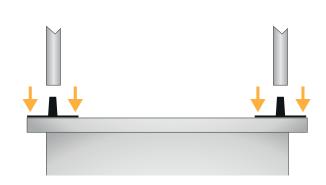

4. Insert the tubes into the previously applied couplings



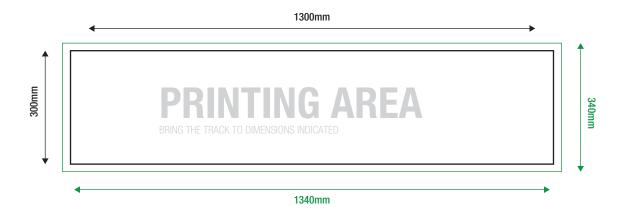



ABUNDANCE

CUT

SAFETY MARGIN

(Do not place important content beyond this margin))

INFO FILE

Formats: .eps .pdf .jpg .tiff

Color profile: CMYK

Images: 100dpi - 1000dpi (for 1:10 scale files)

Fonts: converted into paths

Die path: only cutting path (where present)

