

ASSEMBLY INSTRUCTIONS

TOP VIEW

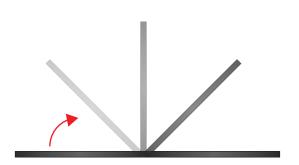


1. Open the top of the bench - repeat the operation for the base (the base panel has 2 holes)

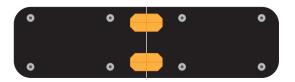


SIDE VIEW



 ${\bf 2.}\ {\sf Lock}$ in place by positioning the central tabs perpendicularly repeat the operation for the base

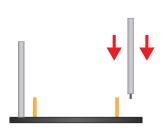

3. Apply the tubes by screwing them into the appropriate holes, repeat the operation for the base

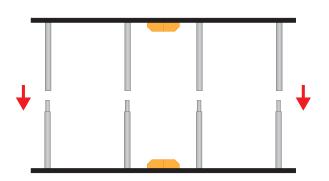

4. Join the two parts together



5. Insert the print on the structure




6. Insert the silicone profile into the perimeter shaping on the top and base to tension the print



youtube.com/StudioStandsSrl for the assembly video tutorial



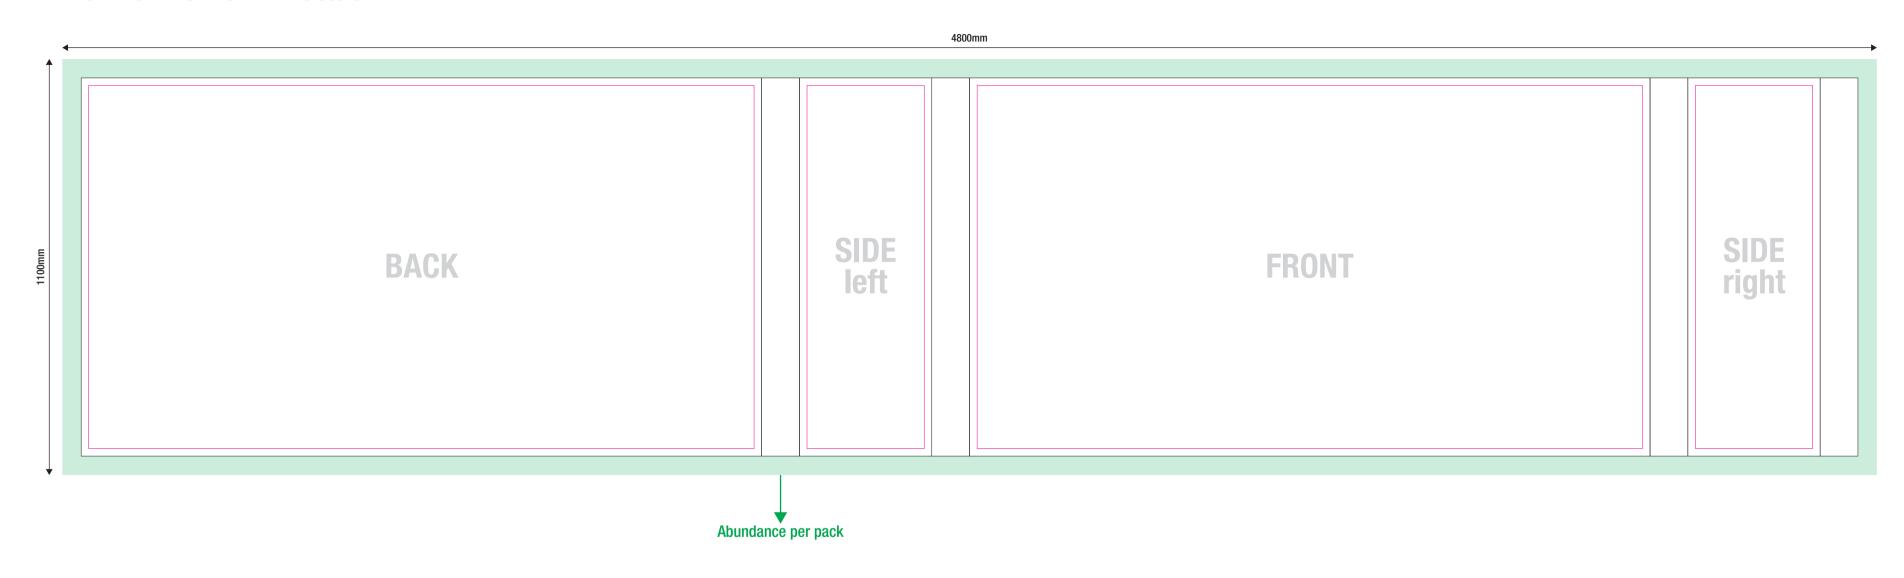

— ABUNDANCE

SAFETY MARGIN

(Do not place important content beyond this margin))

INFO FILE Formats: .eps .pdf .jpg .tiff

Color profile: CMYK

Images: 100dpi - 1000dpi (for 1:10 scale files)

Fonts: converted into paths

Die path: only cutting path (where present)

