


ASSEMBLY INSTRUCTIONS

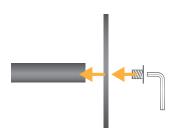

1. Join the circular base to the vertical pole, fixing the parts with the screw and Allen key supplied.

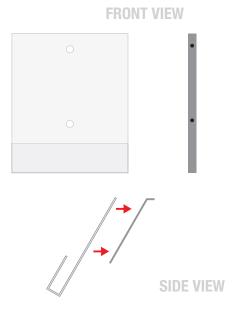

2. Apply the metal support to the back of the plexiglass brochure pocket and secure with screws.

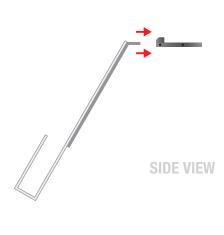

3. Insert the metal support into the ring and lock by acting on the screw



4. Insert the brochure holder pockets onto the