

ASSEMBLY INSTRUCTIONS

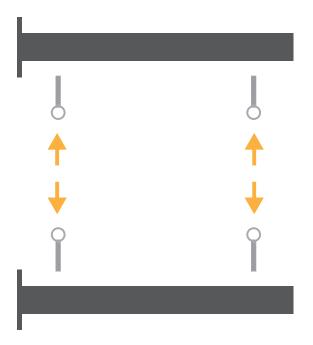


1. After fixing the black tubes to the wall, apply the four eyelet screws in the appropriate holes.

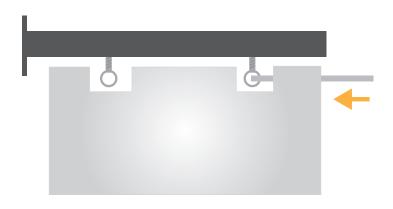

2. Insert the metal rod into the upper slot of the print and into the screw eyelets.



3. Insert the adjustable elastics into the eyelets of the screws located on the base.

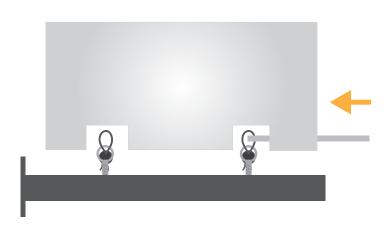

4. Insert the metal rod into the lower slot of the print and into the adjustable elastic bands. Tension as desired.



youtube.com/StudioStandsSrl for the assembly video tutorial



BACK formato scelto + 2mm 450mm 450mm Plenty for buttonhole 602mm

DOUBLE-SIDED PRINT

ABUNDANCE

CUT

SAFETY MARGIN

(Do not place important content beyond this margin))

INFO FILE

 $\textbf{Formats:} \ . \texttt{eps.pdf.jpg.tiff}$

Color profile: CMYK

Images: 100dpi - 1000dpi (for 1:10 scale files)

Fonts: converted into paths

Die path: only cutting path (where present)

