


ASSEMBLY INSTRUCTIONS

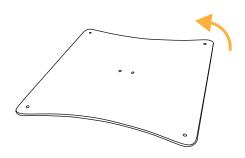


1. Turn the support plate over

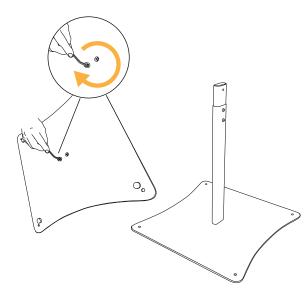


2. Insert the screws, apply the first column segment and use the Allen key on the screws to lock in place

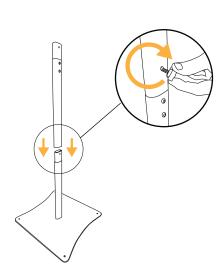

3. Insert the central segment and lock in position by acting on the throttle screw to lock in position

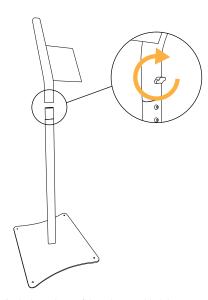

4. Apply the end part of the column and lock in position by acting on the butterfly screw

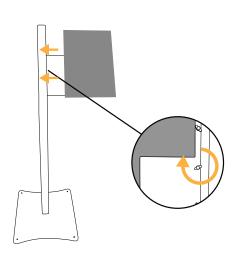

 ${\bf 5.}$ Insert the panel and lock using the screws

