



ASSEMBLY INSTRUCTIONS

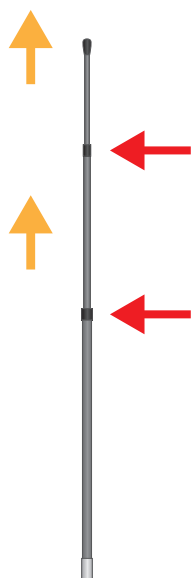

1. Extend the telescopic rod and act on the various sections to block the parts.

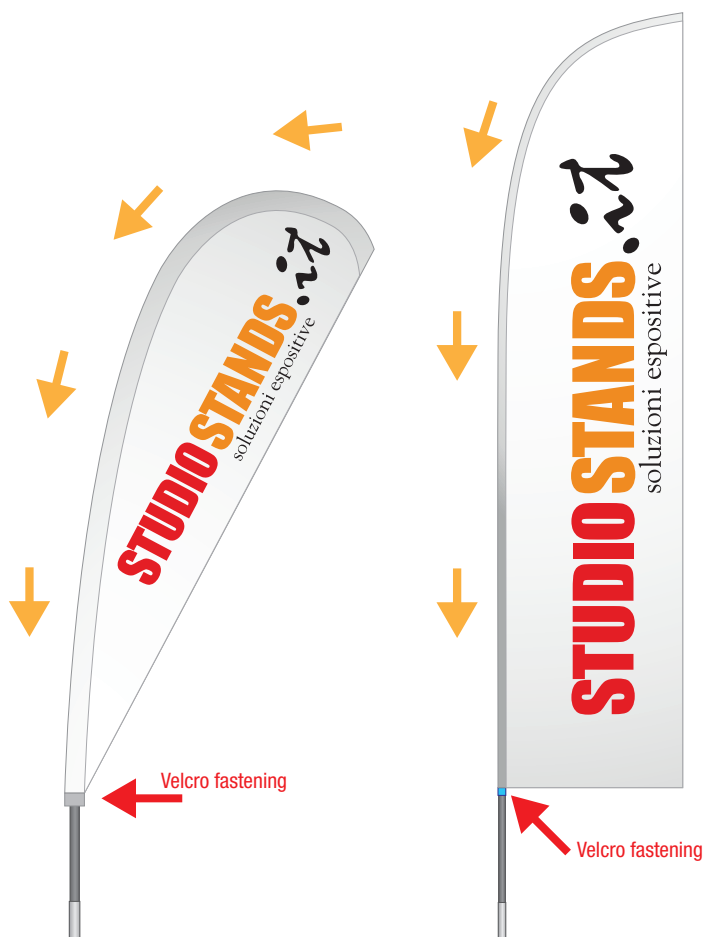

2. Insert the structure into the print slot and secure with the Velcro straps



3. Insert the rod into the appropriate fixing system connected to the braces.



youtube.com/StudioStandSrl
for the assembly video tutorial

DROP


768mm

1563mm

PRINTING AREA
BRING THE TRACE TO THE DIMENSIONS INDICATED

NOTE

ELEMENTS 1 AND 2
WILL BE USED FOR
COMPLETE THE DISPLAY SLOTH

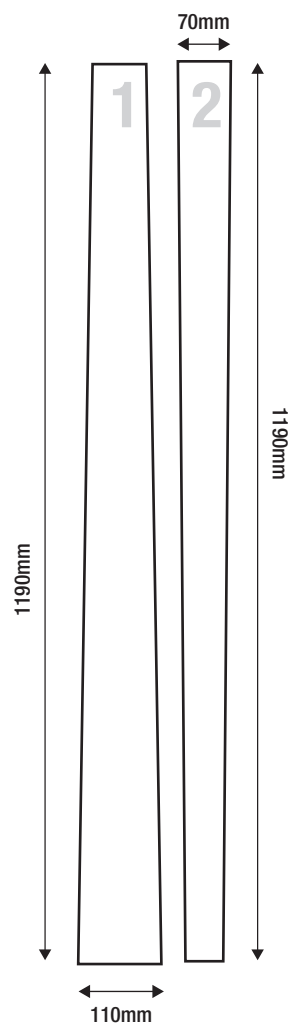

ABUNDANCE

CUT

SAFETY MARGIN
(Do not place important content
beyond this margin))

INFO FILE

Formats: .eps .pdf .jpg .tiff


Color profile: CMYK

Images: 100dpi - 1000dpi (for 1:10 scale files)


Fonts: converted into paths

Die path: only cutting path (where present)

SAIL

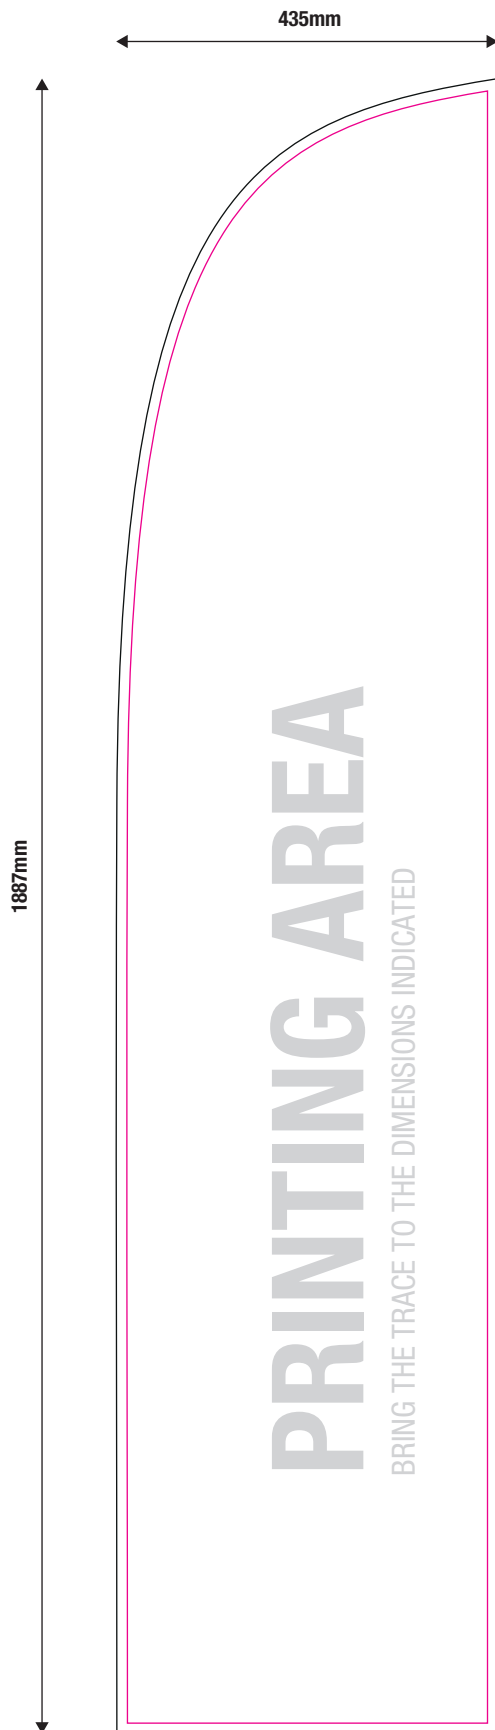

- ABUNDANCE**
- CUT**
- SAFETY MARGIN**
(Do not place important content beyond this margin))

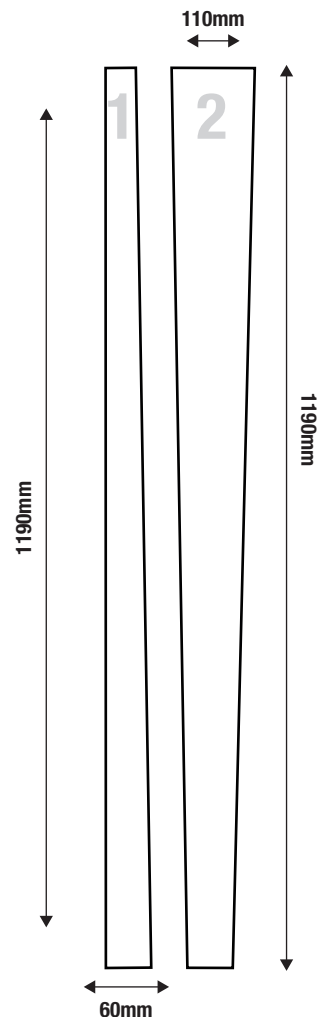

NOTE
ELEMENTS 1 AND 2
WILL BE USED FOR
COMPLETE THE DISPLAY SLOTH

INFO FILE

Formats: .eps .pdf .jpg .tiff
Color profile: CMYK
Images: 100dpi - 1000dpi (for 1:10 scale files)
Fonts: converted into paths
Die path: only cutting path (where present)