




ASSEMBLY INSTRUCTIONS

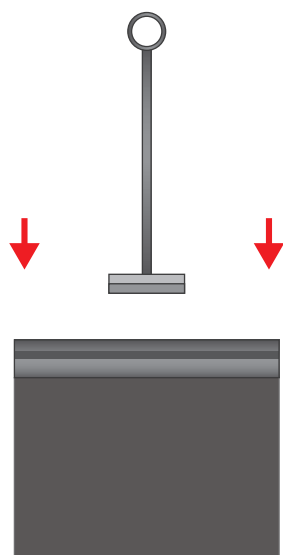


1. Apply the fitting perpendicular to the base

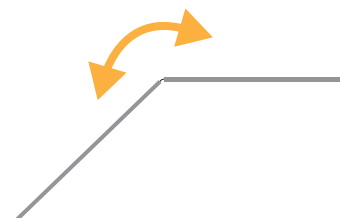

2. Compose the flexible rod

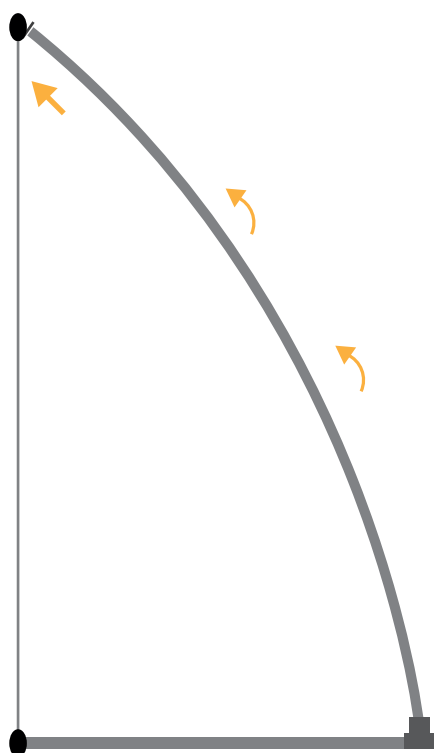

3. Insert the end part of the composite rod into the upper profile of the display

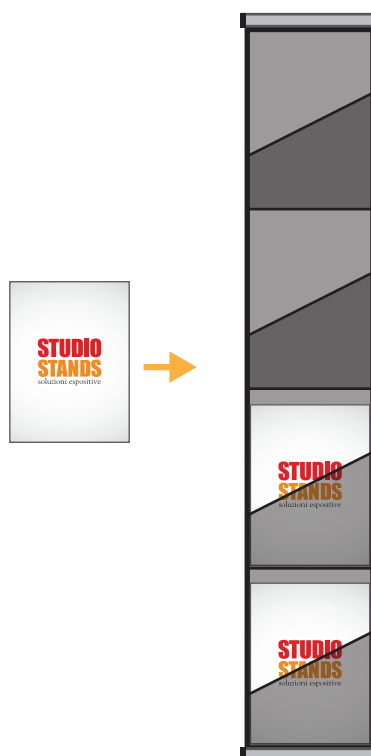

4. Insert the prints into the brochure holder pockets



youtube.com/StudioStandSrl
for the assembly video tutorial