


## ASSEMBLY INSTRUCTIONS - FLAT TOTEM

FRONT VIEW




1. Apply the uprights to the two vertical plates of the base using the screws supplied.


TOP VIEW

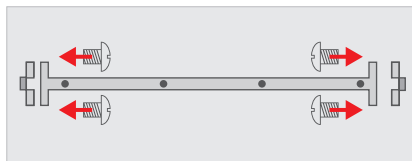


FRONT VIEW

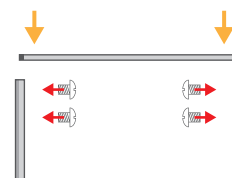


2. Secure the upper crosspiece, taking care to leave the holes in the upper part

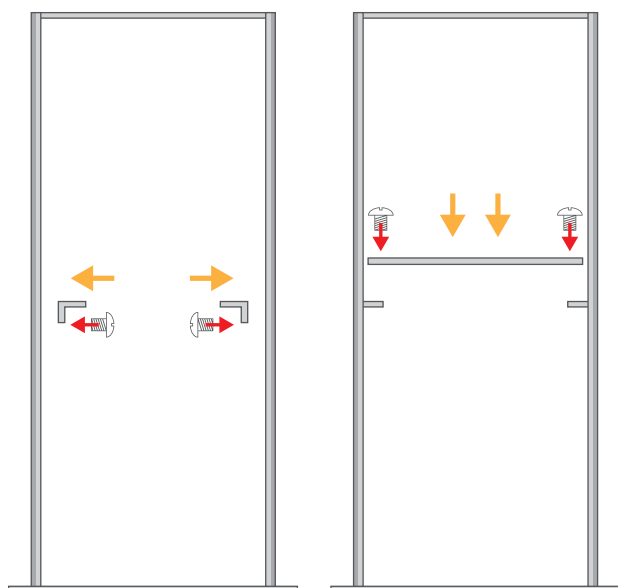

3. In the case of horizontal crosspieces (optional) for monitor / accessories, fix the support fins to the vertical uprights, then fix the horizontal bar with the screws supplied

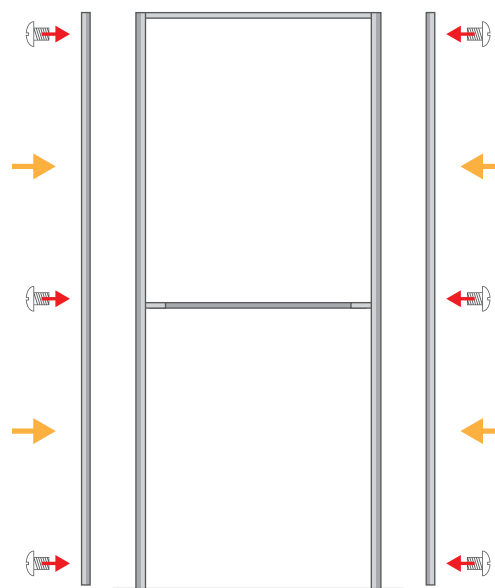

4. Apply the panel locking fins to the vertical uprights.  
(leave sufficient space for inserting the printed panel - lock later)

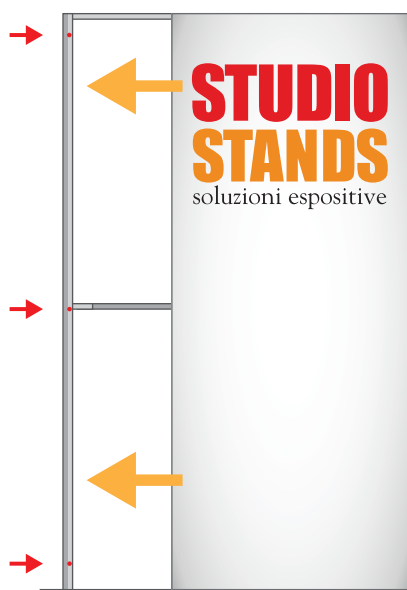

5. Insert the printed panels into the appropriate slots then lock the screws of the panel locking tabs.




6. Apply the side and upper covers to the structure and secure with the supplied screws.

### NOTE:

If the totem has LED backlighting, you must apply the LED adhesive strips inside the totem on the two vertical uprights. The power supply can be placed on the base, inside the totem. The power cable must come out of the appropriate hole on the base.

# TOTEM FLAT

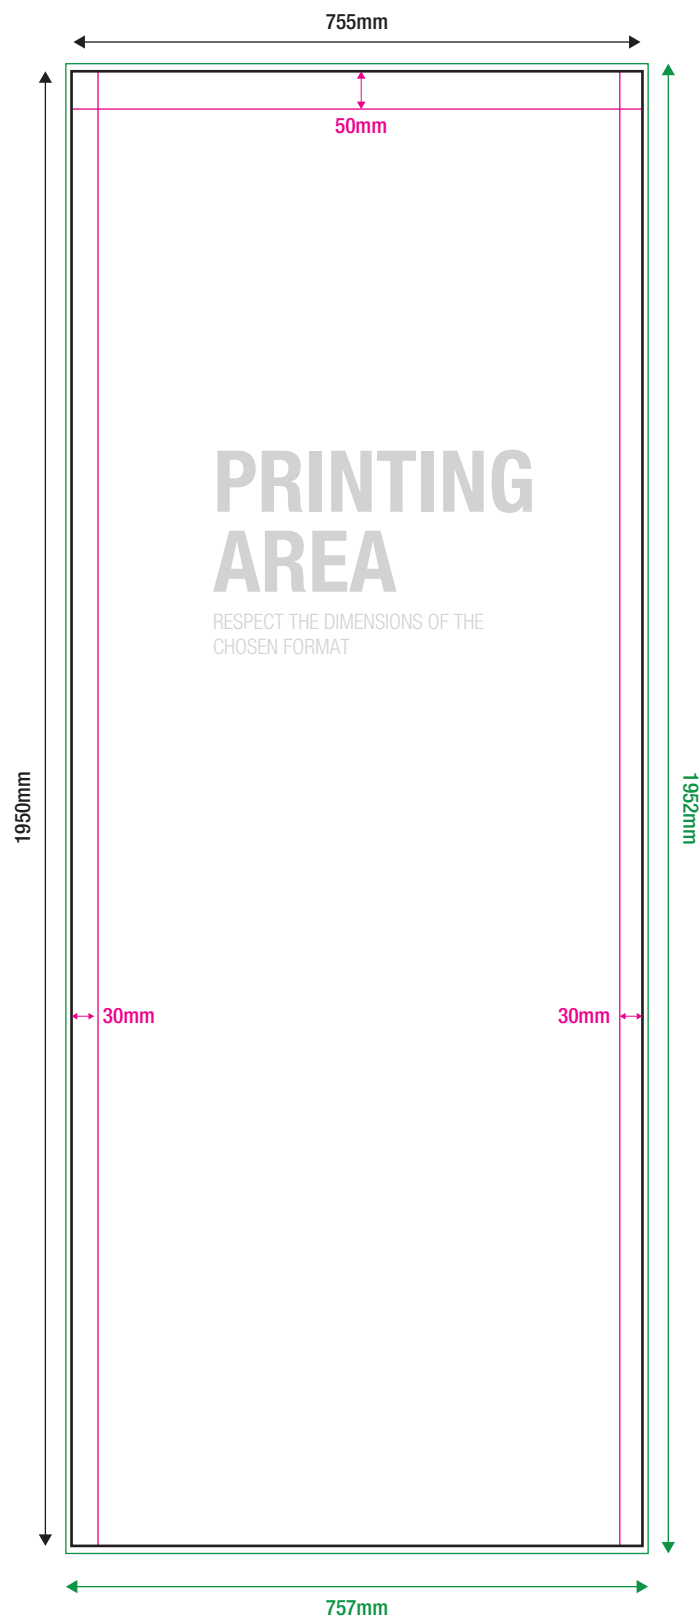

- ABUNDANCE
- CUT
- SAFETY MARGIN  
(Do not place important content beyond this margin))

## INFO FILE

Formats: .eps .pdf .jpg .tiff  
Color profile: CMYK  
Images: 100dpi - 1000dpi (for 1:10 scale files)  
Fonts: converted into paths  
Die path: only cutting path (where present)

