

ASSEMBLY INSTRUCTIONS



1. Kit includes: base (A), base top (B), post (C), screw (D), wrench (E), gasket (F).



2. Place the base(A) on the floor and place the top(B) on top of the base.



3. Rotate the base sideways and insert the screw (D) into the appropriate hole.




4. Insert the gasket (F) onto the column part (C).



5. Place the pedestal and gasket on the screw above the base.



6. Place the post and base on their side and initially secure the screws with your fingers.

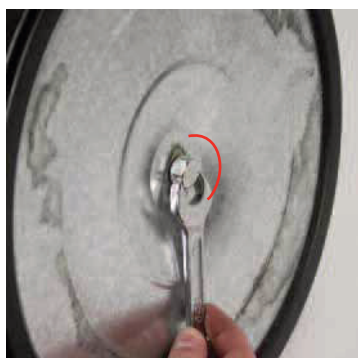

7. Using the supplied wrench, secure the screw on the base.



8. Stretch the tape from the first column to the second by inserting the end of the tape on the appropriate hook.



9. Adjust the ribbon using the screw on the plastic terminal.



1. Insert the tape into the fastener and lock it in place.