



ASSEMBLY INSTRUCTIONS




1. Open the two aluminum snap profiles, insert the print and then close the profiles again

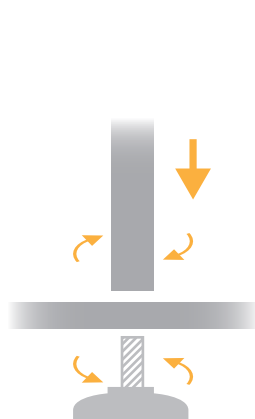

2. Screw the rod to the base.

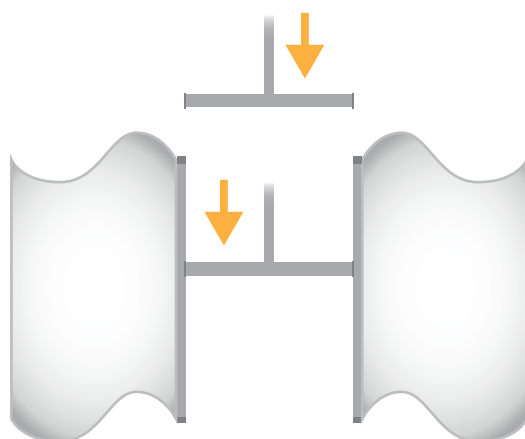

3. Attach the base to the Skatto profiles at the bottom of the print by inserting it into the special rail.

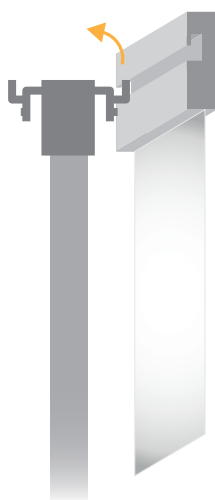

4. Hook the upper Skatto profiles to the rod.



youtube.com/StudioStandSrl
for the assembly video tutorial

PRINTING AREA

INDICATIVE TRACK
PROVIDE GRAPHICS AT DIMENSIONS
CHOICES

2012mm

1002mm



ABUNDANCE

CUT

SAFETY MARGIN

(Do not place important content
beyond this margin))

INFO FILE

Formats: .eps .pdf .jpg .tiff

Color profile: CMYK

Images: 100dpi - 1000dpi (for 1:10 scale files)

Fonts: converted into paths

Die path: only cutting path (where present)