



ASSEMBLY INSTRUCTIONS




1. Open the two aluminum snap profiles, insert the print and then close the profiles

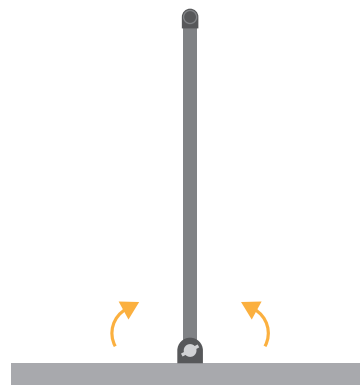

2. Place the base perpendicular to the lower profile (acting on the screw).

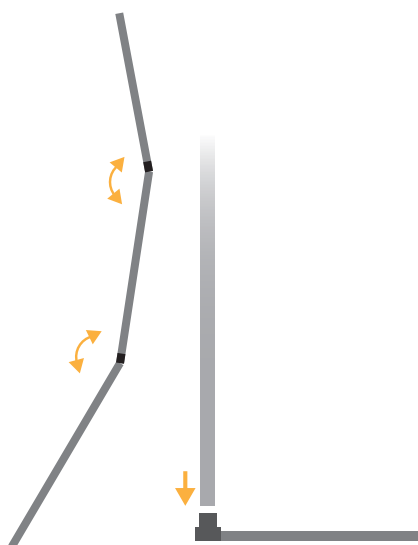


3. Insert the aluminum rod into the hole in the base.

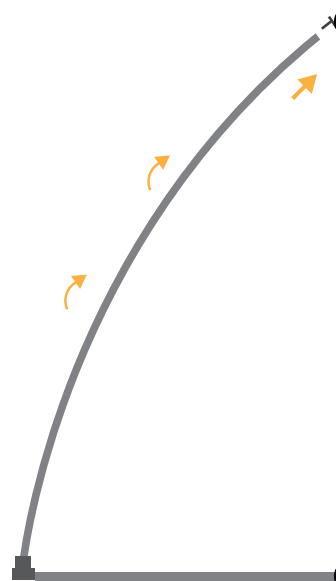

4. Flex the rod made up of three tubes until it is inserted into the connection detail attached to the upper profile.



youtube.com/StudioStandsSrl
for the assembly video tutorial

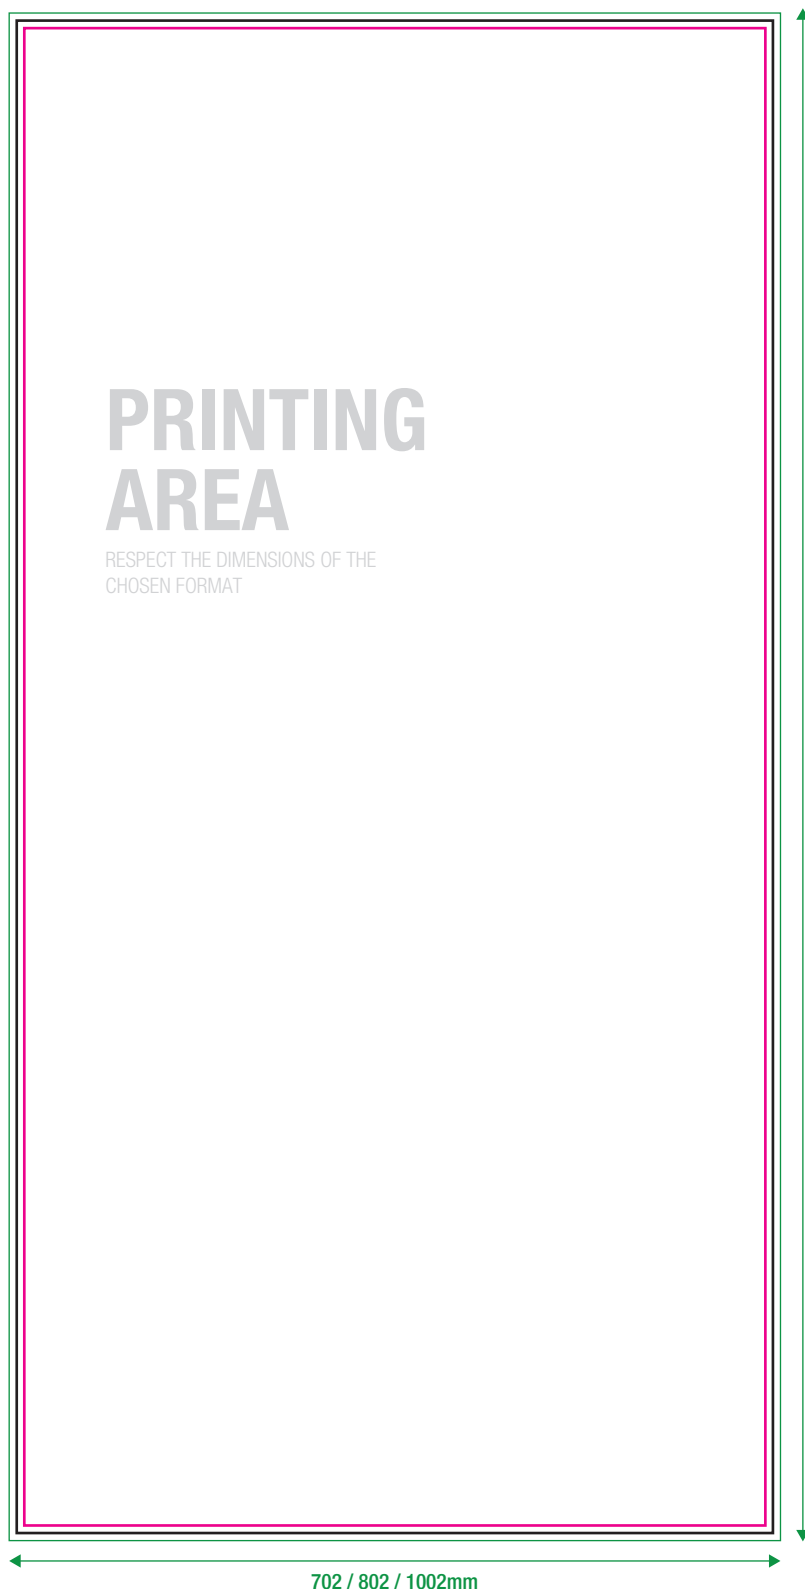

INDICATIVE TRACK

Standard format 70x200cm with possibility of different formats.

2002mm

702 / 802 / 1002mm

- **ABUNDANCE**
- **CUT**
- **SAFETY MARGIN**
(Do not place important content beyond this margin))

INFO FILE

Formats: .eps .pdf .jpg .tiff
Color profile: CMYK
Images: 100dpi - 1000dpi (for 1:10 scale files)
Fonts: converted into paths
Die path: only cutting path (where present)