



ASSEMBLY INSTRUCTIONS

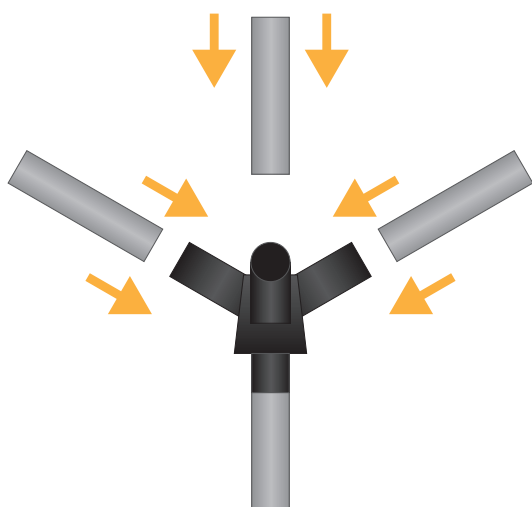

1. Insert the support rods into the appropriate slots in the plastic profile of the tubular.


(repeat the operation for the top and bottom)

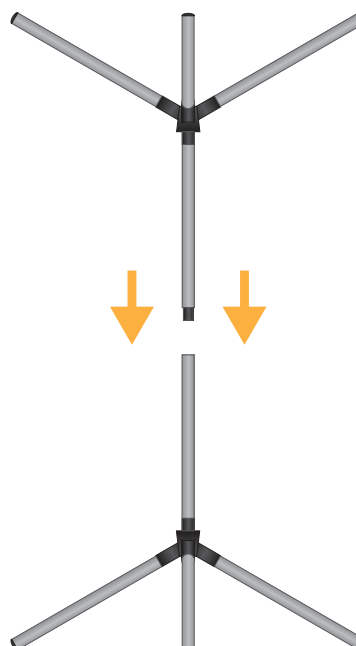

2. Join the two interlocking parts together



3. Apply prints to the top and bottom profiles.
The graphics will be tensioned once all the sheets have been applied.

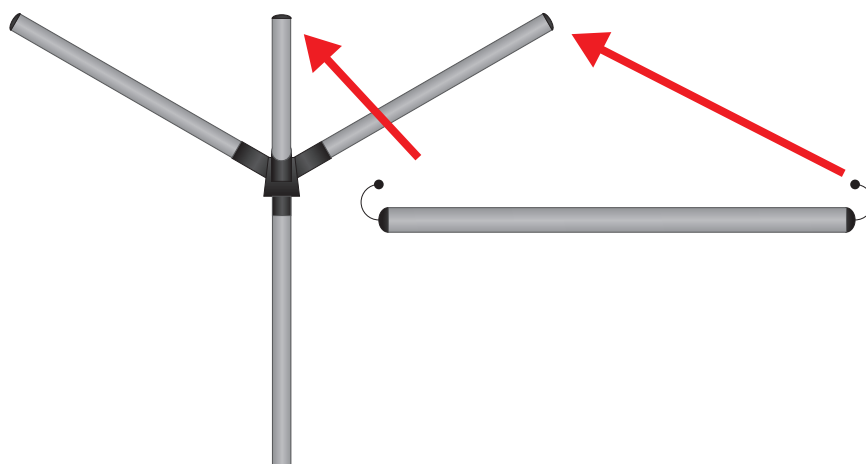

4. Apply the horizontal profiles with the hooks at the ends.



youtube.com/StudioStandSrl
for the assembly video tutorial



- ABUNDANCE
- CUT
- SAFETY MARGIN
(Do not place important content
beyond this margin))

INFO FILE

Formats: .eps .pdf .jpg .tiff
Color profile: CMYK
Images: 100dpi - 1000dpi (for 1:10 scale files)
Fonts: converted into paths
Die path: only cutting path (where present)