DESK DROP
ASSEMBLY INSTRUCTIONS

view from above

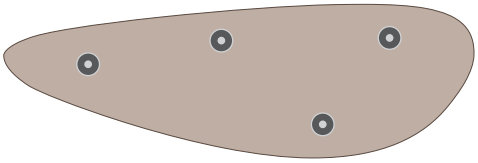

desk base

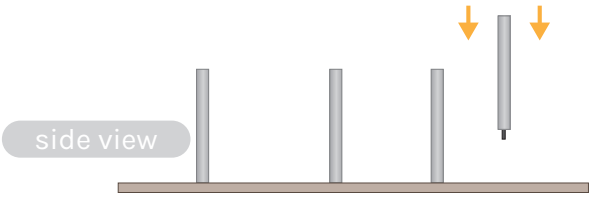

side view

1. Screw the aluminum tubes to the base following the order of the numbered stickers present

view from above

top desk

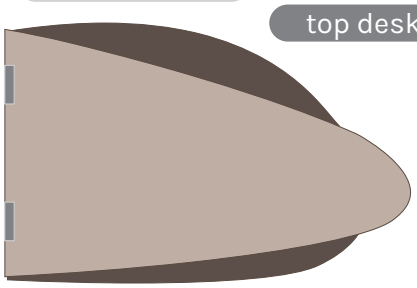

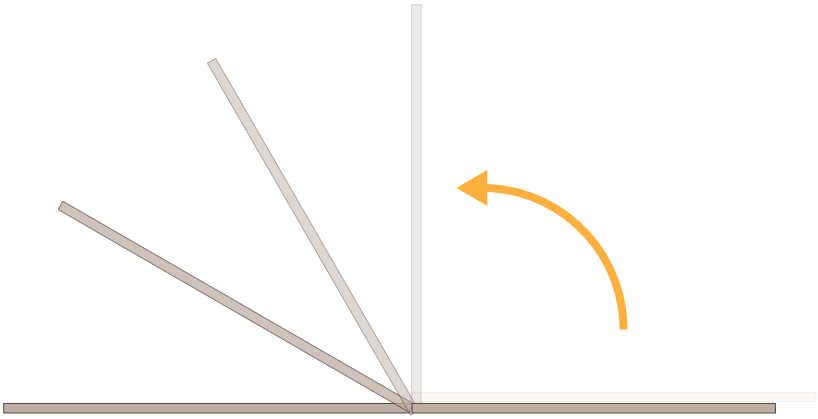

2. Open the top of the counter like a book side view

view from above

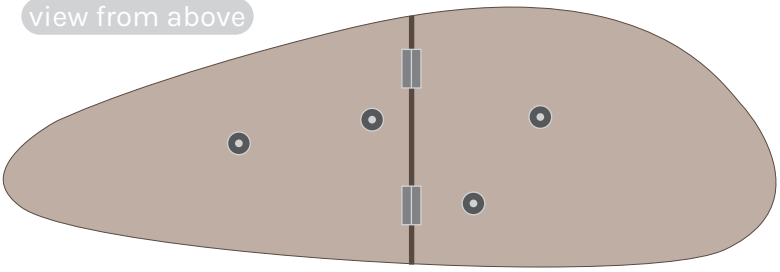

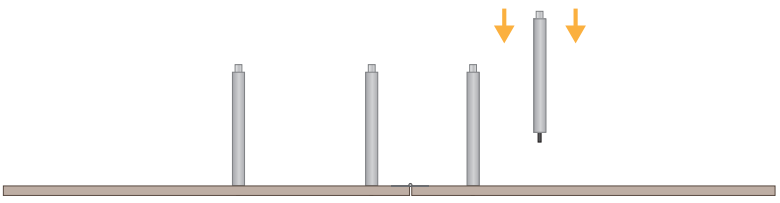

3. Screw the remaining tubes to the top of the bench side view

WATCH THE VIDEO TUTORIAL
youtube.com/studioStandsSrl

STUDIOSTANDS.it®
soluzioni espositive & stampa digitale

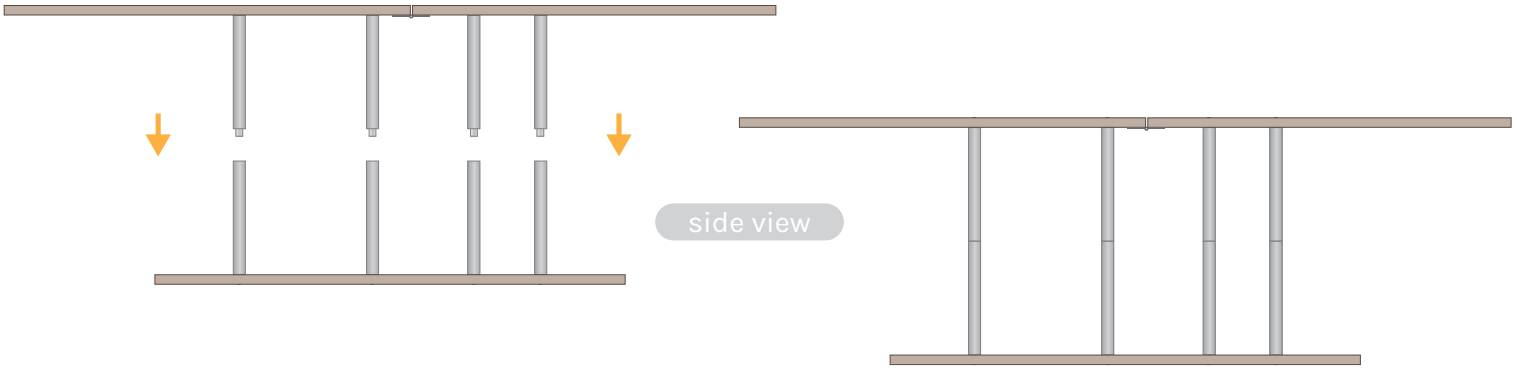

4. Simply join the 2 parts together by interlocking

5. Cover the structure by applying the "sock" print

6. Lock by acting on the hinge

DESK DROP
ASSEMBLY INSTRUCTIONS

STUDIOSTANDS.it®
soluzioni espositive & stampa digitale

INFO FILE

Formats:
.eps .pdf .jpg .tiff
Color profile:
CMYK
Images:
included within the file at at least 100dpi resolution in 1:1 scale or 1000dpi for 1:10 scale works
Fonts:
converted into paths
Die path:
Keep ONLY the outermost path - all other paths must be removed
Crop marks/register/color bars/file info:
DO NOT insert inside the file

ABUNDANCE

CUT

SAFETY MARGIN
(Do not place important content beyond this margin)

STUDIOSTANDS.it®
soluzioni espositive & stampa digitale

1:1 SCALE TEMPLATE

see page 3 for file info

DESK DROP
front body

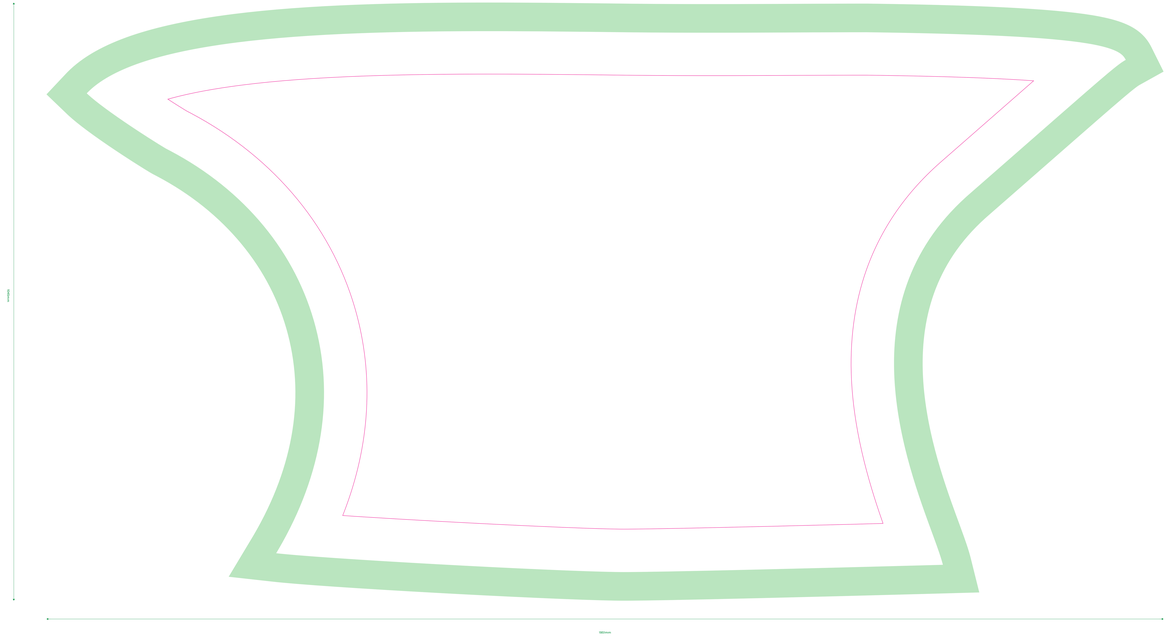

DESK DROP
rear body

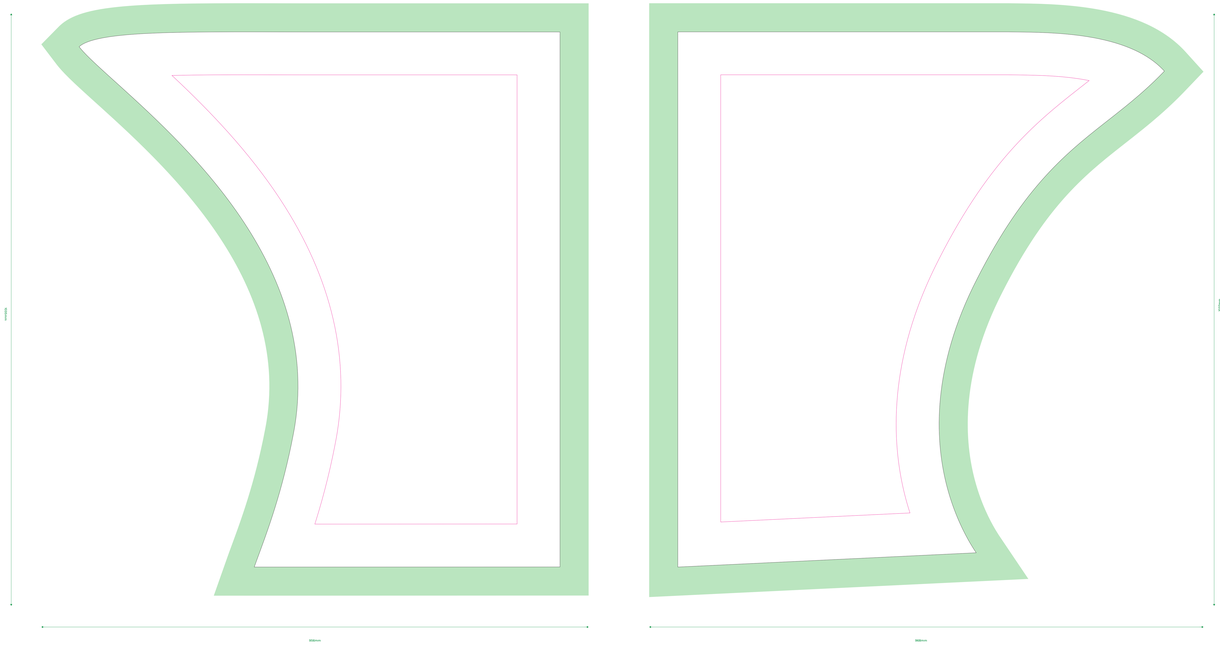

1:1 SCALE TEMPLATE

see page 3 for file info

DESK DROP
support surface

DESK DROP
base
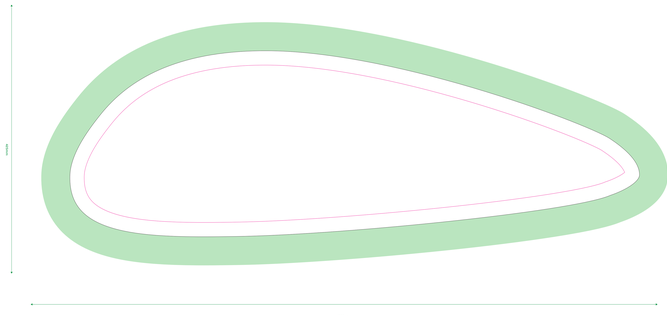
(not visible - if not supplied it will be made of neutral fabric)