ASSEMBLY INSTRUCTIONS - TOTEM TRIS

TOP VIEW

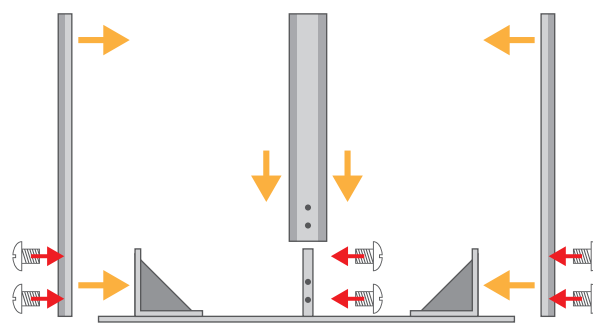## FRONT VIEW
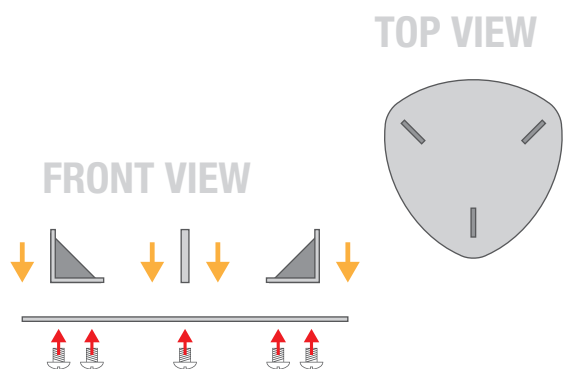
1. Apply the three corner brackets to the base plate and secure with the screws supplied.

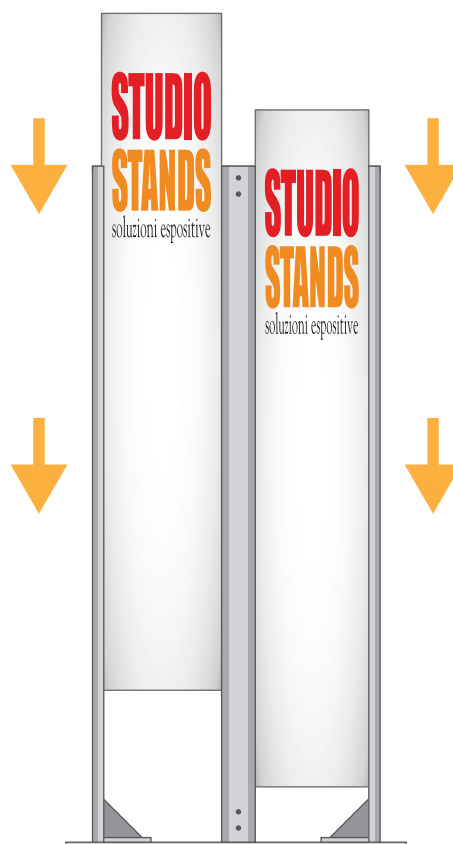**2.** Apply the shoulders to the corner brackets and secure with the screws supplied.

3. Apply the bracket to the upper end of the shoulders and secure with the screws supplied.
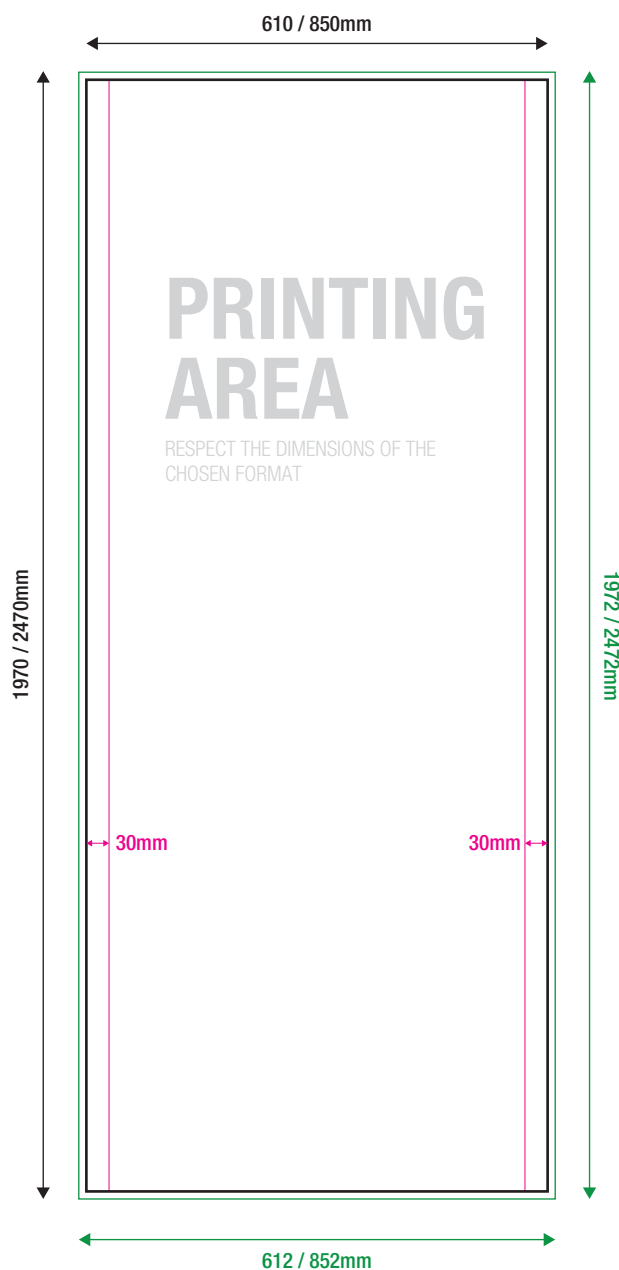(The H250 version includes a diaphragm to support the panels)

4. Insert the printed panels into the appropriate shaping of the shoulders by simply sliding them.

NOTE

In the base of Totem Tris there are holes to allow anchoring to the ground (where possible) and guarantee greater stability.
Alternatively, it is possible to insert ballasts in the central compartment between the panels.
If the totem has LED backlighting, you must apply the LED adhesive strips inside the totem on the two vertical uprights. The power supply can be placed on the base, inside the totem.
The power cable must come out of the appropriate hole on the totem upright (when assembling the structure, prepare the cable already in correspondence with this hole).

5. Attach the top cover and secure with the supplied screws.

youtube.com/StudioStandsSrl
for the assembly video tutorial

OUTDOOR displays / **TOTEM TRIS**

STUDIOSTANDS.it ®
soluzioni espositive & stampa digitale

610 / 850mm

PRINTING
AREA

RESPECT THE DIMENSIONS OF THE
CHOSEN FORMAT

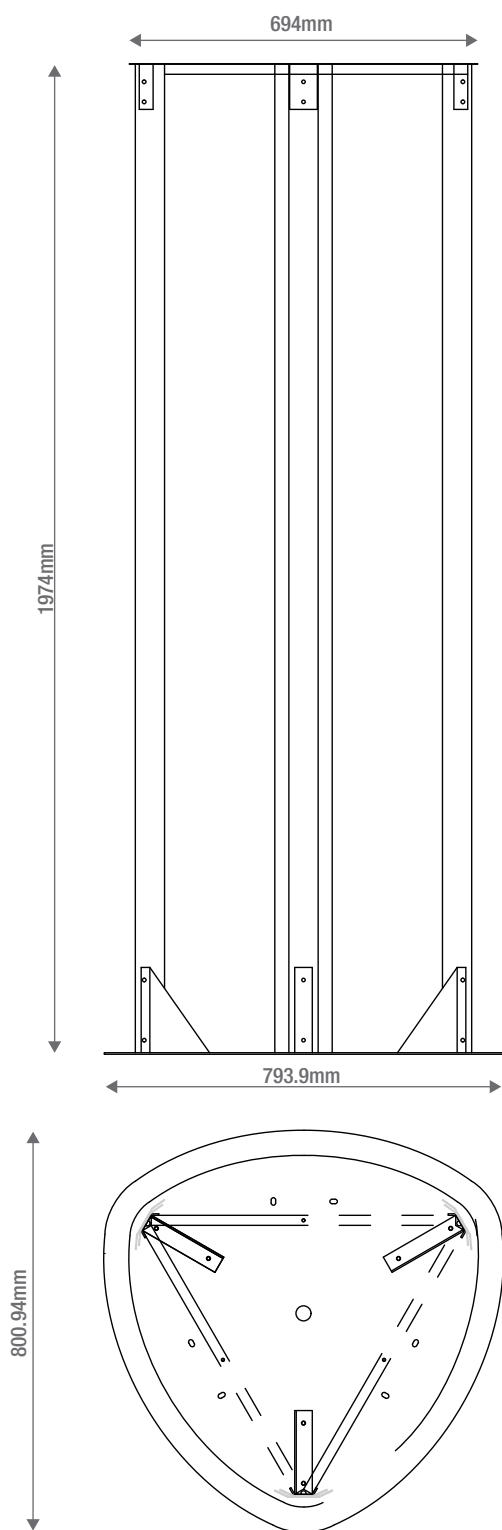1970 / 2470mm

1972 / 2472mm

30mm
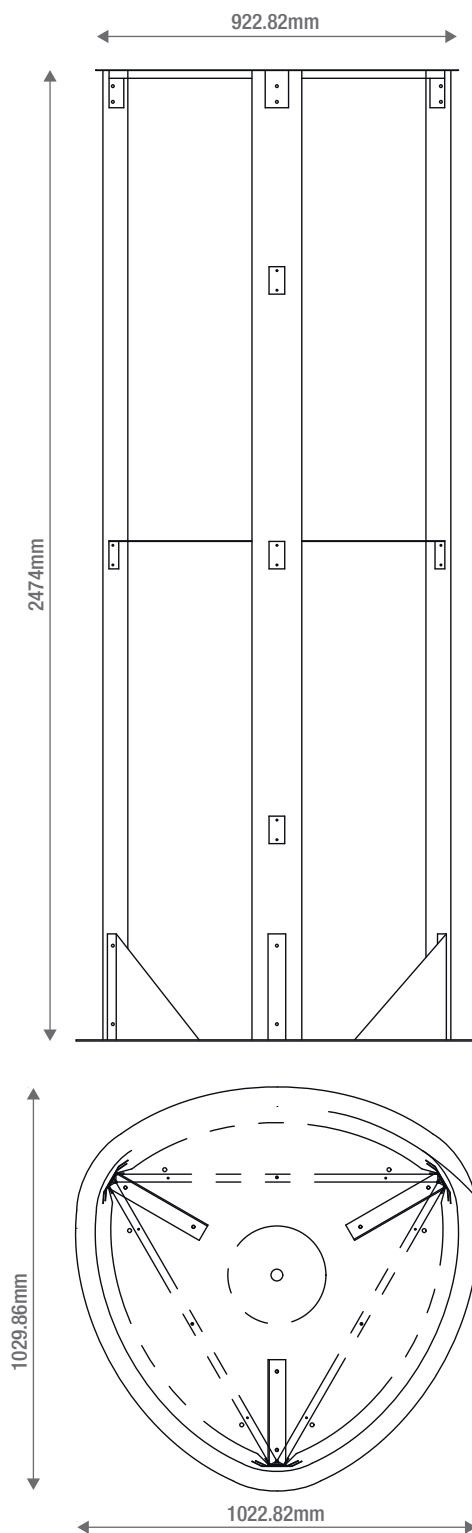
30mm

612 / 852mm

INDICATIVE TRACK

ABUNDANCE

CUT

SAFETY MARGIN
(Do not place important content
beyond this margin))

INFO FILE

Formats: .eps .pdf .jpg .tiff

Color profile: CMYK

Images: 100dpi - 1000dpi (for 1:10 scale files)

Fonts: converted into paths

Die path: only cutting path (where present)

OUTDOOR displays / **TOTEM TRIS**

STUDIOSTANDS.it®
soluzioni espositive & stampa digitale

694mm

1974mm

793.9mm

800.94mm

700.94mm

TOTEM TRIS H200 FRAME

922.82mm

2474mm

1029.86mm

929.86mm

1022.82mm

TOTEM TRIS H250 FRAME

OUTDOOR displays / **TOTEM TRIS**

STUDIOSTANDS.it®

soluzioni espositive & stampa digitale